

# Rockbox Bold S - Wireless Speaker Dried Green Fresh'n Rebel



## Descriptif produit

**The Bold S is ready for anything. This speaker is portable in size, waterproof and guaranteed to sound great wherever you go.**

### Dimensions

Because of its ultra-compact size, you can easily take the Rockbox Bold S anywhere with you. This cube-shaped speaker is the perfect companion for your daily adventures. The included carrying clip makes it easy to hang it wherever you want and move around with music.

### Waterproof

Like to listen to music by the sea, on a beach or in the snow? Don't worry, because the Bold S is completely waterproof (IPX7) and if it gets dirty, just rinse it under the tap.

### Dual Fun Mode

The Rockbox Bold S Dual Fun Mode lets you wirelessly connect two Bold S speakers. Turn up the volume and get the party started.

### Battery life

Don't worry about draining the battery, because the Rockbox Bold S has a 12-hour battery life. The speaker recharges fully in 1.5 hours to get your music going again in no time.

### Quality materials

The speaker is covered with a durable and protective "sandwich" fabric. This "bouncy", fully waterproof exterior of the speaker ensures the Bold S is protected in all situations.

### Hands-free operation

Want to invite more friends to your party? It's possible by using the Bold S' hands-free feature with the built-in microphone to make a hands-free phone call.

## Bluetooth

**Color : Dried Green**

**Ref : FB1RB6000DG**

**EAN : 8720249801559**

**Pack contents :** 1 Rockbox Bold S waterproof Bluetooth speaker + 1 Charging cable (USB to Micro-USB) + 1 Audio cable (3.5 mm) + 1 Quick Start Guide



# Informations complémentaires

Dimensions: 85 x 85 x 85 mm  
Weight: 286 g  
Charging time: 1H30  
Wireless autonomy: 12H  
Wireless Bluetooth  
Audio input port (3.5 mm)  
Waterproof (IPX7)  
Dual Fun Mode (connect two speakers)  
Speaker function (built-in microphone)  
DC input: 5V/1A max (Micro-USB)  
Color: Silky Sand

## Compatible mobiles

### ALCATEL

1 (5033) / 1B 2020 / 1S (2020) / 1S (2021) / 1S (5024) / 1X (5059) / 1X 2019 (5008) / 20 SE / 20R 5G / 3 (5052) / 3C (5026) / 3L (5034) / 3L 2020 / 3V (5099) / 3X (5058) / 3X 2019 (5048) / 5 (5086) / A5 LED / IDOL 3 (4.7) / IDOL 4 / ONE TOUCH IDOL 2S / POP 3 5.0 / POP 4

### APPLE

AIRPODS / AIRPODS 2 / AIRPODS 3 / AIRPODS PRO / AIRPODS PRO 2 / AIRTAG / APPLE WATCH 4 38-40mm / APPLE WATCH 4 40-42mm / APPLE WATCH 4-5-6-SE 40mm / APPLE WATCH 4-5-6-SE 44mm / APPLE WATCH 5 38-40mm / APPLE WATCH 5 40-42mm / APPLE WATCH 5 44mm / APPLE WATCH 6 38-40mm / APPLE WATCH 6 40-42mm / APPLE WATCH 7 38-40mm / APPLE WATCH 7 40-42mm / APPLE WATCH 8 41mm / APPLE WATCH 8 44mm / APPLE WATCH 9 41mm / APPLE WATCH SE 2022 40mm / APPLE WATCH SE 2022 44mm / APPLE WATCH SE 40mm / APPLE WATCH SE 44mm / APPLE WATCH ULTRA 2 49mm / APPLE WATCH ULTRA 49mm / IPAD 10 10.9 (2022) / IPAD 2 9.7 (2011) / IPAD 3 9.7 (2012) / IPAD 4 9.7 (2012) / IPAD 5 9.7 (2017) / IPAD 7 10.2 (2019) / IPAD AIR 1 9.7 (2013) / IPAD AIR 2 9.7 (2014) / IPAD AIR 4 10.9 2020 / IPAD AIR 5 10.9 2022 / IPAD MINI 1 7.9 (2012) / IPAD MINI 3 7.9 (2014) / IPAD MINI 4 7.9 (2015) / IPAD PRO / IPAD PRO 10.5 / IPAD PRO 11 (2018) / IPAD PRO 11 2020 / IPAD PRO 12.9 (2018) / IPHONE 11 / IPHONE 11 PRO / IPHONE 11 PRO MAX / IPHONE 12 / IPHONE 12 MINI / IPHONE 12 PRO / IPHONE 12 PRO MAX / IPHONE 13 / IPHONE 13 MINI / IPHONE 13 PRO / IPHONE 13 PRO MAX / IPHONE 14 / IPHONE 14 PLUS / IPHONE 14 PRO / IPHONE 14 PRO MAX / IPHONE 15 / IPHONE 15 PRO MAX / IPHONE 16 / IPHONE 16 PLUS / IPHONE 16 PRO / IPHONE 16 PRO MAX / IPHONE 3G / IPHONE 3GS / IPHONE 4 / IPHONE 4S / IPHONE 5 / IPHONE 5C / IPHONE 5S / IPHONE 6 / IPHONE 6 PLUS / IPHONE 6S / IPHONE 6S PLUS / IPHONE 7 / IPHONE 7 PLUS / IPHONE 7 PLUS RED / IPHONE 7 RED / IPHONE 8 / IPHONE 8 PLUS / IPHONE SE / IPHONE SE (2020) / IPHONE SE (2022) / IPHONE X / IPHONE XR / IPHONE XS / IPHONE XS MAX / IPOD TOUCH

### BLACKBERRY

CURVE 9320 / KEY2 / Q10 / Q5

### CROSSCALL

ACTION X3 / ACTION X5 / CORE M4 / CORE M5 / CORE T4 / CORE T5 / CORE X3 / CORE X4 / CORE X5 / CORE Z5 / STELLAR X5 / TREKKER X3 / TREKKER M 1 / TREKKER X3 / TREKKER X4

### DORO

6040 / 6530 / 6620 / 6621 / 7060 / 7070 / 7080 / 8035 / 8040 / 8042 / 8050 / 8062 / 8080 / 8100 / 8200 / 8210 / 8220 / PHONEEASY 612

### ECHO

BUZZ / DUNE / FEELING / FUSION / HALO / HORIZON / HORIZON LITE / HORIZON LITE PLUS / HORIZON M / JAVA / LOLLY / LOOK / NOTE / PUSH / SMART4G / STAR / STELLAR / SURF / VOLT / WIZ

### GOOGLE

PIXEL 3 XL / PIXEL 3a / PIXEL 4 / PIXEL 4 XL / PIXEL 4A / PIXEL 4A 5G / PIXEL 5 / PIXEL 6 / PIXEL 6A / PIXEL 6PRO / PIXEL 7 / PIXEL 7A / PIXEL 7PRO / PIXEL 8 / PIXEL 8A / PIXEL 8PRO / PIXEL WATCH 2022

### HONOR

HONOR 10 / HONOR 10 LITE / HONOR 10X LITE / HONOR 20 / HONOR 20 LITE / HONOR 20 PRO / HONOR 200 / HONOR 200 LITE / HONOR 200 PRO / HONOR 50 5G / HONOR 50 LITE / HONOR 5C / HONOR 5X / HONOR 6C / HONOR 6C PRO / HONOR 6X / HONOR 70 / HONOR 70 LITE / HONOR 7A / HONOR 7C / HONOR 7S / HONOR 7X / HONOR 8 / HONOR 8A / HONOR 8S / HONOR 8X / HONOR 9 / HONOR 9 LITE / HONOR 90 / HONOR 90 LITE / HONOR 90 SMART / HONOR 9A / HONOR 9X / HONOR 9X LITE / HONOR MAGIC 3 PRO 5G / HONOR MAGIC 4 LITE 5G / HONOR MAGIC 5 LITE 5G / HONOR MAGIC 5 PRO / HONOR MAGIC 6 LITE / HONOR MAGIC 6 PRO / HONOR MAGIC V2 / HONOR PLAY / HONOR VIEW 20 / HONOR X6 / HONOR X7 / HONOR X7a / HONOR X8 / HONOR X8 5G / HONOR X8a / HONORMAGV2

### HTC

7 PRO / DESIRE 530 / DESIRE 825 / ONE A9 / ONE M8 / ONE M9

### HUAWEI

ASCEND P7 / MATE 10 LITE / MATE 10 PRO / MATE 20 / MATE 20 LITE / MATE 20 PRO / MATE 30 PRO / MATE 40 PRO / MATE S / MEDIAPAD T3 10 / NOVA 5T / P SMART / P SMART 2019 / P SMART 2020 / P SMART 2021 / P SMART PRO 2019 / P SMART S / P SMART Z / P10 / P10 Lite / P20 / P20 LITE / P20 LITE 2019 / P20 PRO / P30 / P30 LITE / P30 PRO / P40 / P40 LITE / P40 LITE 5G / P40 LITE 5G / P40 LITE E / P40 PRO / P8 / P8 LITE 2016 / P9 / P9 LITE / Y3 / Y5 2018 / Y5 2019 / Y5 II / Y5P / Y6 2019 / Y6 PRO 2017 / Y6P / Y6S (2019) / Y7 2018 / Y7 2019

### LG

G4 / G4 C / K10 / K11 / K22 / K4 / K40 / K40S / K50S / K51S / K9 (Candy) / LG K51S / Q6 / Q60

### LOGICOM

E350 / E500 / FIVE / FLOW / WAVE

### MOTOROLA

MOTO E13 4G / MOTO E14 / MOTO E20 / MOTO E20 LITE / MOTO E22i / MOTO E4 PLUS / MOTO EDGE (2022) / MOTO EDGE 30 NEO / MOTO EDGE 40 / MOTO EDGE 40 NEO / MOTO G04 / MOTO G04s / MOTO G13 / MOTO G14 / MOTO G22 / MOTO G23 / MOTO G24 / MOTO G24 POWER / MOTO G30 / MOTO G31 / MOTO G32 / MOTO G34 5G / MOTO G50 5G / MOTO G52 / MOTO G53 5G / MOTO G54 5G / MOTO G62 5G / MOTO G72 / MOTO G73 / MOTO G84 / THINKPHONE

**NOKIA**

1 2018 / 2 / 3 / 3.1 / 3310 2017 / 5.1 / 5.1 PLUS / 6 2018 / 6.1 / 7 PLUS / 7.1 / 9 PUREVIEW / XL

**ONEPLUS**

6T / 7 / 7 PRO

**OPPO**

A12 / A15 / A16 / A16 S / A17 / A3 / A31 / A5 (2020) / A53S / A54 4G / A54 5G / A54 S / A57 / A57S / A72 / A73 4G / A73 5G / A74 / A74 5G / A76 / A77 / A78 5G / A9 (2020) / A94 5G / A96 / A97 5G / AX7 / FIND N2 FLIP / FIND X / FIND X2 LITE / FIND X2 NEO / FIND X2 PRO / FIND X3 LITE / FIND X3 NEO / FIND X3 PRO / FIND X5 / FIND X5 LITE / FIND X5 PRO / R15 PRO / RENO 10X ZOOM / RENO 2 / RENO 2F / RENO 2Z / RENO 4 / RENO 4 PRO 5G / RENO 4Z 5G / RENO 5 LITE / RENO 6 / RENO 6 PRO / RENO 8 / RENO 8 LITE / RENO 8 PRO / RENO Z / RX17 NEO

**ORANGE**

NEVA JET / NEVA PLAY / NEVA ZEN

**REALME**

7i / 8 5G / 8 Pro 4G / 8i / 9 4G / 9 Pro + / 9i / C11 / C11 2021 / C21 / C21Y / C25 / C30 / C31 / C33 / C35 / C51 / C55

**SAMSUNG**

G WATCH / G WATCH FE / G WATCH ULTRA / G WATCH3 / G WATCH4 / G WATCH4 CLASSIC / G WATCH5 / G WATCH5 PRO / G WATCH6 / G WATCH6 CLASSIC / G WATCHACT / G WATCHACT2 / GALAXY A02s A025/Q26 / GALAXY A03 A035 / GALAXY A03S / GALAXY A04S / GALAXY A05s 057 / GALAXY A10 A105 / GALAXY A12 A125 / GALAXY A13 4G A135 / GALAXY A13 5G A136 / GALAXY A14 4G A145 / GALAXY A14 5G A146 / GALAXY A15 5G 156 / GALAXY A20 / GALAXY A20e A202 / GALAXY A21S A217 / GALAXY A22 4G / GALAXY A22 5G / GALAXY A23 5G / GALAXY A25 256 / GALAXY A3 A300 / GALAXY A3 A310 2016 / GALAXY A3 A320 2017 / GALAXY A31 A315 / GALAXY A32 4G / GALAXY A32 5G / GALAXY A33 5G A336 / GALAXY A34 5G A346 / GALAXY A35 5G 356 / GALAXY A40 A405 / GALAXY A41 A415 / GALAXY A42 5G / GALAXY A5 A500 / GALAXY A5 A510 2016 / GALAXY A5 A510 2017 / GALAXY A5 A520 2017 / GALAXY A50 A505 / GALAXY A51 5G A516 / GALAXY A51 A515 / GALAXY A52 4G / GALAXY A52 5G / GALAXY A52s 5G / GALAXY A53 5G A536 / GALAXY A54 5G A546 / GALAXY A55 5G 556 / GALAXY A6 A600 2018 / GALAXY A6+ A605 2018 / GALAXY A7 A700 / GALAXY A7 A750 2018 / GALAXY A70 A705 / GALAXY A71 A715 / GALAXY A72 4G / GALAXY A8 A530 2018 / GALAXY A80 A805 / GALAXY A9 A920 2018 / GALAXY ACE 3 S7270 / GALAXY ACE 4 4G G357 / GALAXY ACE S5830 / GALAXY ALPHA G850 / GALAXY BUDS LIVE / GALAXY CAMERA GC100 / GALAXY CORE 4G G386 / GALAXY CORE I8260 / GALAXY CORE PLUS G3500 / GALAXY CORE PRIME G360 / GALAXY EXPRESS I8730 / GALAXY FOLD / GALAXY GRAND 2 G7100 / GALAXY GRAND PRIME G530 / GALAXY J1 J100 / GALAXY J1 J120 2016 / GALAXY J2 PRO J250 2018 / GALAXY J3 J320 2016 / GALAXY J4+ J415 / GALAXY J5 J500 / GALAXY J5 J510 2016 / GALAXY J6 J600 / GALAXY J6+ J610 / GALAXY J7 J710 2016 / GALAXY M52 5G M526 / GALAXY MEGA 5.8 I9150 / GALAXY MEGA I9200 / GALAXY NEXUS I9250 / GALAXY NOTE 10 + N975 / GALAXY NOTE 10 LITE / GALAXY NOTE 10 N970 / GALAXY NOTE 2 N7100 / GALAXY NOTE 20 5G / GALAXY NOTE 20 ULTRA / GALAXY NOTE 3 LITE N7505 / GALAXY NOTE 3 N9000 / GALAXY NOTE 4 N910 / GALAXY NOTE 9 N960 / GALAXY S 10 + G975 / GALAXY S 10 5G G977 / GALAXY S 10 e G970 / GALAXY S 10 G973 / GALAXY S 10 LITE G770 / GALAXY S 20 + G985 / GALAXY S 20 FE G780 / GALAXY S 20 G980 / GALAXY S 20 ULTRA G988 / GALAXY S 21 5G 991 / GALAXY S 21 FE 990 / GALAXY S 21 ULTRA 5G 998 / GALAXY S 21+ 5G 996 / GALAXY S 22 5G 901 / GALAXY S 22 ULTRA 5G 908 / GALAXY S 22+ 5G 906 / GALAXY S 23 5G 911 / GALAXY S 23 FE 711 / GALAXY S 23 ULTRA 5G 918 / GALAXY S 23+ 5G 916 / GALAXY S 24 921 / GALAXY S 24 ULTRA 928 / GALAXY S 24+ 926 / GALAXY S 3 4G I9305 / GALAXY S 3 I9300 / GALAXY S 3 MINI I8190 / GALAXY S 4 I9500 / GALAXY S 4 MINI I9190 / GALAXY S 4 ZOOM / GALAXY S 5 G900 / GALAXY S 5 MINI G800 / GALAXY S 6 EDGE G925 / GALAXY S 6 EDGE PLUS G928 / GALAXY S 6 G920 / GALAXY S 7 EDGE G935 / GALAXY S 9 + G965 / GALAXY S 9 G960 / GALAXY TAB 10.1 P7100 / GALAXY TAB 2 10.1 P5110 / GALAXY TAB 4 10.1 T530 / GALAXY TAB 4 7.0 T230 / GALAXY TAB A 10.1 (2019) / GALAXY TAB A 10.1 T580 (2016) / GALAXY TAB A 10.5 2018 / GALAXY TAB A 7.0 T280 (2016) / GALAXY TAB A 8 T295 (2019) / GALAXY TAB A 8.0 (2020) / GALAXY TAB A7 10.4 (2020) T505 / GALAXY TAB A7 Lite 8.7 T220 / GALAXY TAB A8 10.5 X200-205 / GALAXY TAB A8 8 (2017) / GALAXY TAB A9 / GALAXY TAB A9+ / GALAXY TAB ACTIVE 2 / GALAXY TAB ACTIVE 4 PRO 5G / GALAXY TAB ACTIVE 5 / GALAXY TAB ACTIVE 5 EE / GALAXY TAB ACTIVE PRO / GALAXY TAB ACTIVE2 / GALAXY TAB ACTIVE3 / GALAXY TAB S 10.5 T800 / GALAXY TAB S5E / GALAXY TAB S6 LITE 10.4 / GALAXY TAB S7 10 / GALAXY TAB S7 FE 12.4 T730 / GALAXY TAB S7+ 12.4 T970 / GALAXY TAB S9 / GALAXY TAB S9 FE / GALAXY TAB S9 ULTRA / GALAXY TAB S9+ / GALAXY TREND 2 LITE G318 / GALAXY TREND LITE S7390 / GALAXY XCOVER 3 G388 / GALAXY XCOVER 4S / GALAXY XCOVER 5 G525F / GALAXY XCOVER 6 PRO / GALAXY XCOVER 7 / GALAXY XCOVER PRO / GALAXY Z FLIP 3 711 / GALAXY Z FLIP 6 741 / GALAXY Z FLIP 700 / GALAXY Z FOLD 2 5G 916 / GALAXY Z FOLD 3 926 / GALAXY Z FOLD 4 936 / GALAXY Z FOLD 5 946 / GALAXY Z FOLD 6 956

**SFR**

STARSHINE 5 / STARTRAIL 6 / STARTRAIL 8

**SONY**

SWITCH OLED / XPERIA 1 / XPERIA 10 / XPERIA 10 II / XPERIA 10 PLUS / XPERIA 5 / XPERIA 5 II / XPERIA E1 / XPERIA E5 / XPERIA L1 / XPERIA M4 AQUA / XPERIA T3 / XPERIA X / XPERIA XA / XPERIA XA1 ULTRA / XPERIA XA2 / XPERIA XA2 PLUS / XPERIA XA2 ULTRA / XPERIA XZ / XPERIA XZ PREMIUM / XPERIA XZ1 / XPERIA XZ1 COMPACT / XPERIA XZ2 / XPERIA XZ3 / XPERIA Z / XPERIA Z2 / XPERIA Z3 / XPERIA Z3 COMPACT / XPERIA Z5 / XPERIA Z5 COMPACT

**VIVO**

V21 / V21 5G / V23 5G / X 51 / X60 PRO / Y01 5G / Y11 / Y11s / Y16 4G / Y20 / Y20s / Y21 / Y21s / Y22s 4G / Y33s / Y35 4G / Y52 5G / Y55 5G / Y70 / Y72 5G / Y76 5G

**WIKO**

BIRDY / CINK FIVE / CINK PEAX / CINK PEAX 2 / DARKFULL / DARKMOON / DARKNIGHT / DARKSIDE / FEVER / FREDDY / HARRY / HARRY 2 / HIGHWAY / JERRY / JERRY 2 / JERRY 3 / LENNY / LENNY 2 / LENNY 3 / LENNY 4 / LENNY 5 / OZZY / POWER U10 / POWER U20 / POWER U30 / PULP 4G / PULP FAB / RAINBOW 4G / RAINBOW LITE 4G / ROBBY / STAIRWAY / SUNNY / SUNNY 2 / SUNNY 2 PLUS / SUNNY 3 / SUNSET 2 / TOMMY / TOMMY 2 PLUS / TOMMY 3 / U FEEL LITE / U PULSE LITE / VIEW / VIEW 3 / VIEW 3 LITE / VIEW 4 / VIEW 4 LITE / VIEW 5 / VIEW 5 PLUS / VIEW GO / VIEW LITE / VIEW MAX / VIEW PRIME / VIEW XL / VIEW2 / WIM Y50 / Y51 / Y52 / Y60 / Y61 / Y62 / Y62 Plus / Y80 / Y81 / Y82

**XIAOMI**

11T / 11T PRO / 12 / 12 Lite / 12 PRO / 12T / 12T PRO / MI 10 5G / MI 10 LITE 5G / MI 10 PRO 5G / MI 10T 5G / MI 10T LITE 5G / MI 10T PRO 5G / MI 11 5G / Mi 11 Lite 5G / MI 11 LITE 5G NE / MI 11 PRO 5G / MI 11i / MI 8 LITE / MI 9 / MI 9 LITE / MI 9 SE / MI 9T / MI 9T PRO / MI A1 / MI A2 / MI A3 / MI MIX 2 / MI MIX 2S / MI MIX 3 / MI NOTE 10 LITE / MI NOTE 9 / POCOPHONE F1 / REDMI 10 / REDMI 10 5G / REDMI 10A / REDMI 10C / REDMI 12 4G / REDMI 12 5G / REDMI 12C / REDMI 13 / REDMI 13C 4G/5G / REDMI 5 / REDMI 6 / REDMI 6A / REDMI 7 / REDMI 7A / REDMI 8 / REDMI 8A / REDMI 9 / REDMI 9A / REDMI 9C / REDMI 9C NFC / REDMI 9T / Redmi A1 / REDMI A2 / REDMI A3 / REDMI GO / REDMI NOTE 10 / REDMI NOTE 10 5G / REDMI NOTE 10 PRO / REDMI NOTE 10 PRO 4G / REDMI NOTE 10S / REDMI NOTE 10S / REDMI NOTE 11 4G / REDMI NOTE 11 PRO 4G / REDMI NOTE 11 PRO 5G / REDMI NOTE 11 PRO+ 5G / REDMI NOTE 11S 4G / REDMI NOTE 11S 5G / REDMI NOTE 12 4G / REDMI NOTE 12 5G / REDMI NOTE 12 PRO / REDMI NOTE 12 PRO+ / REDMI NOTE 13 4G / REDMI NOTE 13 5G / REDMI NOTE 13 PRO 5G / REDMI NOTE 13 PRO+ / REDMI NOTE 5 / REDMI NOTE 7 / REDMI NOTE 8 / REDMI NOTE 8 (2021) / REDMI NOTE 8 PRO / REDMI NOTE 8T / REDMI NOTE 9 / REDMI NOTE 9 PRO / REDMI NOTE 9S / REDMI NOTE 9T / REDMI S2 / REDMI WATCH 2 LITE / Xiaomi 11 Lite 5G NE / XIAOMI 13 / XIAOMI 13 PRO / XIAOMI 13T / XIAOMI 13T PRO / XIAOMI 14 / XIAOMI 14 PRO