

Galaxy Buds 3 Pro - True Wireless In-Ear Earphones White Samsung



Descriptif produit



Enjoy a next-level listening experience that lets you feel every note like you're there.

Designed to fit perfectly into your world
Hearing is believing. Galaxy Buds3 Pro pack a studio-worthy listening experience into our most comfortable design yet — wear them as long as you want.

Every moment now sounds epic
Studio-quality sound isn't just for the pros. Feel every note like you're there with Galaxy Buds3 Pro. Now everyone can have a next-level listening experience, whether you're rocking out to your playlist or staying informed with a podcast.

Hear only what you want
Reduce unwanted noise with Galaxy Buds3 Pro. They use Intelligent Active Noise Cancellation to quiet even the loudest outside sounds. Tune in to what matters most without being bothered by distracting sounds around you.

Surround sound that's all about you
Go beyond just listening and surround yourself with the sounds you love — and nothing else. Amplify what you like. Minimize what you don't. Enhanced 360-degree audio brings out the tones you love from every angle for a personalized surround-sound experience every time you pop them in.

Don't miss a word
Keep the conversation going without taking out your Galaxy Buds3 Pro. When your voice is detected, Intelligent Conversation Mode turns off Active Noise Cancellation, turns down the volume and puts your Buds in Ambient Mode. This helps you hear the other person's voice loud and clear. When the conversation is over, your Buds shift back to their previous settings automatically. Now you can catch every word without having to lift a finger.

A Galaxy in perfect sync
These Buds play well with others. Galaxy Buds3 Pro pair easily with your Galaxy devices. Simply open the case and tap connect to pair with your Galaxy devices quickly. Whether you're pairing with your tablet, phone or Watch, Buds3 Pro syncs in a cinch and automatically switches audio sources when an alert or call comes in to keep you in the know.

Look out for your Buds
Keeping up with your Buds is easy with Smart Things Find. When a Bud becomes disconnected, you'll get an alert. If you miss that notification, simply turn on Smart Things Find on your phone. You'll see a map that points to the last location the Bud was connected. Simply retrieve your Bud, and you're good to go!

Pairs almost like magic
You won't believe how easy it is to pair Galaxy Buds3 Pro to your other Galaxy devices through your Samsung account — just tap to connect as soon as you open the case. Once paired, Buds3 Pro show up in your list of paired devices. Then with Bluetooth Info Sync, you can effortlessly shift your Buds3 Pro between your Galaxy phone, tablet,

Universel

Color : White

Ref : SM-R630NZW

EAN : 8806095651644

Pack contents : 1 Galaxy Buds 3 Pro kit + 1 charging case + 3 pairs of end caps + 1 charging cable TYPE USB-C + 1 quick start guide

watch or PC.

Best Buds with your TV and PC

Next-level sound doesn't stop at calls and music. Sync Galaxy Buds3 Pro with your Samsung TV for a theatrical experience, or pair them with your PC and lock in to your workflow.

Sound never felt so right

Pop 'em in and forget they're there. Galaxy Buds3 Pro are designed to be even more comfortable than before and fit securely no matter what you're doing. Whether you're working or working out, make all your moves comfortably.

Not today, water

Water won't ruin your workout. Your IPX7 water-resistant Galaxy Buds3 Pro can keep the beat going even with a little rain. They're protected for immersion up to 3 feet deep for a half-hour.

Informations complémentaires

In-Ear

Compatible mobiles

SAMSUNG

G WATCH / G WATCH FE / G WATCH ULTRA / G WATCH3 / G WATCH4 / G WATCH4 CLASSIC / G WATCH5 / G WATCH5 PRO / G WATCH6 / G WATCH6 CLASSIC / G WATCHACT / G WATCHACT2 / GALAXY A02s A025/026 / GALAXY A03 A035 / GALAXY A03S / GALAXY A04S / GALAXY A05s 057 / GALAXY A10 A105 / GALAXY A12 A125 / GALAXY A13 4G A135 / GALAXY A13 5G A136 / GALAXY A14 4G A145 / GALAXY A14 5G A146 / GALAXY A15 5G 156 / GALAXY A20 / GALAXY A20e A202 / GALAXY A21S A217 / GALAXY A22 4G / GALAXY A22 5G / GALAXY A23 5G / GALAXY A25 256 / GALAXY A3 A300 / GALAXY A3 A310 2016 / GALAXY A3 A320 2017 / GALAXY A31 A315 / GALAXY A32 4G / GALAXY A32 5G / GALAXY A33 5G A336 / GALAXY A34 5G A346 / GALAXY A35 5G 356 / GALAXY A40 A405 / GALAXY A41 A415 / GALAXY A42 5G / GALAXY A5 A500 / GALAXY A5 A510 2016 / GALAXY A5 A520 2017 / GALAXY A50 A505 / GALAXY A51 5G A516 / GALAXY A51 A515 / GALAXY A52 4G / GALAXY A52 5G / GALAXY A52s 5G / GALAXY A53 5G A536 / GALAXY A54 5G A546 / GALAXY A55 5G 556 / GALAXY A6 A600 2018 / GALAXY A6+ A605 2018 / GALAXY A7 A700 / GALAXY A7 A750 2018 / GALAXY A70 A705 / GALAXY A71 A715 / GALAXY A72 4G / GALAXY A8 A530 2018 / GALAXY A80 A805 / GALAXY A9 A920 2018 / GALAXY ACE 3 S7270 / GALAXY ACE 4 4G G357 / GALAXY ACE S5830 / GALAXY ALPHA G850 / GALAXY BUDS LIVE / GALAXY CAMERA GC100 / GALAXY CORE 4G G386 / GALAXY CORE I8260 / GALAXY CORE PLUS G3500 / GALAXY CORE PRIME G360 / GALAXY EXPRESS I8730 / GALAXY FOLD / GALAXY GRAND 2 G7100 / GALAXY GRAND PRIME G530 / GALAXY J1 J100 / GALAXY J1 J120 2016 / GALAXY J2 PRO J250 2018 / GALAXY J3 J320 2016 / GALAXY J4+ J415 / GALAXY J5 J500 / GALAXY J5 J510 2016 / GALAXY J6 J600 / GALAXY J6+ J610 / GALAXY J7 J710 2016 / GALAXY M52 5G M526 / GALAXY MEGA 5.8 I9150 / GALAXY MEGA I9200 / GALAXY NEXUS I9250 / GALAXY NOTE 10 + N975 / GALAXY NOTE 10 LITE / GALAXY NOTE 10 N970 / GALAXY NOTE 2 N7100 / GALAXY NOTE 20 5G / GALAXY NOTE 20 ULTRA / GALAXY NOTE 3 LITE N7505 / GALAXY NOTE 3 N9000 / GALAXY NOTE 4 N910 / GALAXY NOTE 9 N960 / GALAXY S 10 + G975 / GALAXY S 10 5G G977 / GALAXY S 10 e G970 / GALAXY S 10 G973 / GALAXY S 10 LITE G770 / GALAXY S 20 + G985 / GALAXY S 20 FE G780 / GALAXY S 20 G980 / GALAXY S 20 ULTRA G988 / GALAXY S 21 5G 991 / GALAXY S 21 FE 990 / GALAXY S 21 ULTRA 5G 998 / GALAXY S 21+ 5G 996 / GALAXY S 22 5G 901 / GALAXY S 22 ULTRA 5G 908 / GALAXY S 22+ 5G 906 / GALAXY S 23 5G 911 / GALAXY S 23 FE 711 / GALAXY S 23 ULTRA 5G 918 / GALAXY S 23+ 5G 916 / GALAXY S 24 921 / GALAXY S 24 ULTRA 928 / GALAXY S 24+ 926 / GALAXY S 3 4G I9305 / GALAXY S 3 I9300 / GALAXY S 3 MINI I8190 / GALAXY S 4 I9500 / GALAXY S 4 MINI I9190 / GALAXY S 4 ZOOM / GALAXY S 5 G900 / GALAXY S 5 MINI G800 / GALAXY S 6 EDGE G925 / GALAXY S 6 EDGE PLUS G928 / GALAXY S 6 G920 / GALAXY S 7 EDGE G935 / GALAXY S 9 + G965 / GALAXY S 9 G960 / GALAXY TAB 10.1 P7100 / GALAXY TAB 2 10.1 P5110 / GALAXY TAB 4 10.1 T530 / GALAXY TAB 4 7.0 T230 / GALAXY TAB A 10.1 (2019) / GALAXY TAB A 10.1 T580 (2016) / GALAXY TAB A 10.5 2018 / GALAXY TAB A 7.0 T280 (2016) / GALAXY TAB A 8 T295 (2019) / GALAXY TAB A 8.0 (2020) / GALAXY TAB A7 10.4 (2020) T505 / GALAXY TAB A7 Lite 8.7 T220 / GALAXY TAB A8 10.5 X200-205 / GALAXY TAB A8 8 (2017) / GALAXY TAB A9 / GALAXY TAB A9+ / GALAXY TAB ACTIVE 2 / GALAXY TAB ACTIVE 4 PRO 5G / GALAXY TAB ACTIVE 5 / GALAXY TAB ACTIVE 5 EE / GALAXY TAB ACTIVE PRO / GALAXY TAB ACTIVE2 / GALAXY TAB ACTIVE3 / GALAXY TAB S 10.5 T800 / GALAXY TAB S5E / GALAXY TAB S6 LITE 10.4 / GALAXY TAB S7 10 / GALAXY TAB S7 FE 12.4 T730 / GALAXY TAB S7+ 12.4 T970 / GALAXY TAB S9 / GALAXY TAB S9 FE / GALAXY TAB S9 ULTRA / GALAXY TAB S9+ / GALAXY TREND 2 LITE G318 / GALAXY TREND LITE S7390 / GALAXY XCOVER 3 G388 / GALAXY XCOVER 4S / GALAXY XCOVER 5 G525F / GALAXY XCOVER 6 PRO / GALAXY XCOVER 7 / GALAXY XCOVER PRO / GALAXY Z FLIP 3 711 / GALAXY Z FLIP 6 741 / GALAXY Z FLIP 700 / GALAXY Z FOLD 2 5G 916 / GALAXY Z FOLD 3 926 / GALAXY Z FOLD 4 936 / GALAXY Z FOLD 5 946 / GALAXY Z FOLD 6 956