



BLUEWAY

Mini chargeur secteur 2A blanc pour appareils équipés d'un port Micro USB

Un chargeur peu encombrant pour éviter la panne de batterie durant vos voyages

GENCODE :
3571211269076



REF. :

MINICS2AMICWBB

[Télécharger la déclaration de conformité](#)



Caractéristiques

Mini chargeur secteur 2A noir pour appareils équipés d'un port de charge micro USB :

- Une mini base de chargeur secteur USB : permet de charger votre smartphone et de relier n'importe quel câble de charge USB à une prise secteur Europe. Courant de charge : 2A. Tension d'entrée : 100-240 Vac. Tension de sortie : 5 Vac
- Un câble de charge et de synchronisation USB/Micro USB

Atout

Petit et peu encombrant
Câble de charge et de synchronisation

Couleur	Blanc
Contenu du pack	1 base chargeur secteur + 1 câble USB/Micro USB

MOBILES COMPATIBLES

ACER

ALLEGRO / BE TOUCH E130 / BE TOUCH E140 / BE TOUCH E210 / CLOUDMOBILE S500 / ICONIA SMART / ICONIA TAB A100 / ICONIA TAB A500 / ICONIA TAB A501 / ICONIA TAB B1-A71 / LIBERTY TAB / LIQUID E1 / LIQUID E2 / LIQUID EXPRESS E320 / LIQUID GALLANT E350 / LIQUID GLOW / LIQUID METAL / LIQUID MINI / LIQUID Z110 / LIQUID Z2 / LIQUID Z200 / LIQUID Z3

ALCATEL

A3 / A5 LED / IDOL 3 (4.7) / IDOL 3 (5.5) / IDOL 4 / ONE TOUCH GOPLAY / ONE TOUCH IDOL / ONE TOUCH IDOL 2S / ONE TOUCH IDOL MINI / ONE TOUCH IDOL S / ONE TOUCH IDOL ULTRA / ONE TOUCH M'POP / ONE TOUCH PIXI 3 4 POUCES / ONE TOUCH POP S3 / ONE TOUCH STAR / ONE TOUCH X POP / OT-203 / OT-506 / OT-506D / OT-655 / OT-803 / OT-838 / OT-890 / OT-990 / OT-995 / OT-997 / PIXI 3 3.5 / PIXI 3 4 / PIXI 3 4.5 / PIXI 4 3G / PIXI 4 5 / POP 2 4.5 / POP 3 5.0 / POP 4 / POP C1 / POP C5 / POP C7 / POP C9 / POP S7 / 1 (5033) / 1B 2020 / 1S (5024) / 1S 2020 / 1X (5059) / 1X 2019 (5008) / 3 (5052) / 3C (5026) / 3L (5034) / 3L 2020 / 3V (5099) / 3X (5058) / 5 (5086) / 5V (5060) / A3 XL / U5

ARCHOS

40 TITANIUM / 45 HELIUM 4G / SAPHIR 50X

ASUS

GOOGLE NEXUS 7 / NEXUS 7 / PADFONE / PADFONE 2 / ZENFONE 2 ZE500 CL / ZENFONE 2 ZE550 ML / ZENFONE 3 MAX ZC520TL / ZENFONE 4 MAX PLUS ZC554KL / ZENFONE 4 MAX ZC520KL / ZENFONE LIVE ZB501KL / ZENFONE MAX PRO M1 ZB601KL

BLACKBERRY

9720 / BOLD 9700 / BOLD 9780 / BOLD 9790 / BOLD TOUCH 9900 / BOLD TOUCH 9930 / CLASSIC / CURVE 3G 9300 / CURVE 8520 / CURVE 9320 / CURVE 9360 / CURVE 9380 / LEAP / PASSPORT / PEARL 3G 9100 / PEARL 3G 9105 / PLAYBOOK / PRIV / Q10 / Q5 / TORCH 9800 / TORCH 9810 / TORCH 9860 / Z10

BOUYGUES TELECOM

BC 211 / BC311 / BS351 / BS401 / BS402 / BS403 / BS451 / BS471 / ULTYM 4 / ULTYM 4 MAXI / ULTYM 5 / ULTYM 5.2

CROSSCALL

TREKKER X3 / TREKKER M 1 / SPIDER X1

DELL

AERO / MINI 3IX / STREAK / STREAK 7 / THUNDER / VENUE PRO / XCD28 / XCD35

DORO

LIBERTO 822 / 5516 / 6530 / 8020X / 8031 / 8035 / 8040 / 825 / SECURE 580/580 IUP

ECHO

BUZZ / DUNE / FEELING / FUSION / HALO / HORIZON M / JAVA / LOLLY / LOOK / MOON / NOTE / PUSH / SMART4G / STAR / STELLAR / STELLAR 4G / SURF / VOLT / WIZ

FUJITSU

STYLISTIC S01

HONOR

HONOR 5C / HONOR 5X / HONOR 6 PLUS / HONOR 6X / HONOR 6LITE / HONOR 6LITE / HONOR 6A / HONOR 6C / HONOR 6C PRO / HONOR 7A / HONOR 7C / HONOR 7S / HONOR 7X / HONOR 8A / HONOR 8S / HONOR 8X / HONOR 9 LITE / HONOR PLAY / VIEW 10

HP

PRE 3 / TOUCHPAD / VEER

HTC

7 MOZART / 7 PRO / 7 TROPHY / CHACHA / DESIRE 10 LIFESTYLE / DESIRE 310 / DESIRE 510 / DESIRE 530 / DESIRE 601 / DESIRE 610 / DESIRE 620 / DESIRE 626 / DESIRE 650 / DESIRE 816 / DESIRE 820 / DESIRE 825 / DESIRE C / DESIRE EYE / DESIRE HD / DESIRE S / DESIRE X / DESIRE Z / EVO 3D / EXPLORER / FLYER / GOOGLE NEXUS ONE / GRATIA / HD MINI / HD2 / HD7 / INCREDIBLE S / NEXUS 9 / ONE / ONE A9 / ONE M8 / ONE M9 / ONE MINI / ONE MINI 2 / ONE S / ONE SV / ONE V / ONE X / ONE X PLUS / One X9 / ONE XL / RADAR / RHYME / SALSA / SENSATION / SENSATION EX / SENSATION XL / TITAN / TOUCH HD MINI / WILDFIRE S / WINDOWS PHONE 8S / WINDOWS PHONE 8X / DESIRE 12

HUAWEI

ASCEND D QUAD / ASCEND D QUAD XL / ASCEND D1 / ASCEND G300 / ASCEND G6 / ASCEND G6 4G / ASCEND G620S / ASCEND G740 / ASCEND G750 / ASCEND MATE 7 / ASCEND P1 / ASCEND P1 S / ASCEND P7 / ASCEND Y330 / ASCEND Y530 / ASCEND Y550 / G330 / G6150 / IDEOS S7 / IDEOS X5 U8800 / IDEOS X6 U9000 / MATE 8 / MATE S / MEDIAPAD T1 10 / NEXUS 6P / P10 Lite / P8 / P8 LITE 2016 / P8 LITE 2017 / P9 LITE / U8350 / Y3 / Y5 / Y5 II / Y6 / Y6 II / Y635 / MATE 10 LITE / MEDIAPAD T3 10 / MEDIAPAD T3 8 / P SMART / P SMART 2019 / Y5 2018 / Y5 2019 / Y5P / Y6 2017 / Y6 2018 / Y6 2019 / Y6 PRO 2017 / Y6P / Y6S (2019) / Y7 2018 / Y7 2019

LENOVO

C2 / K5 / MOTO Z

LG

A110 / A133 / A155 / A170 / A200 / A250 / A290 / A310 / BELLO 2 / C310 / C320 / C360 / COOKIE 3G T320 / COOKIE LITE T300 / COOKIE LIVE KM570 / COOKIE PLUS G5500 / COOKIE STYLE T310 / F60 / F70 / G FLEX 2 / G PRO 2 / G2 / G3 / G3 S / G4 / G4 C / G4 STYLUS / G5 / G6 / GM730 / GT350 / GT405 / GT540 / K10 / K4 / K7 / K8 / KT770 / L FINO / L65 / L70 / L80 / L90 / LEON 4G LTE / MINI GD880 / NEXUS 4 E960 / NEXUS 5 / NEXUS X5 / OPTIMUS 2X P990 / OPTIMUS 3D MAX P720 / OPTIMUS 3D P920 / OPTIMUS 4X HD P880 / OPTIMUS 7 E900 / OPTIMUS BLACK P970 / OPTIMUS CHAT C550 / OPTIMUS CHIC E720 / OPTIMUS F5 P875 / OPTIMUS F6 D505 / OPTIMUS G / OPTIMUS L3 E400 / OPTIMUS L3 II E430 / OPTIMUS L4 II / OPTIMUS L5 E610 / OPTIMUS L5 II E460 / OPTIMUS L7 II P710 / OPTIMUS L7 P700 / OPTIMUS L9 P760 / OPTIMUS ME P350 / OPTIMUS NET / OPTIMUS ONE P500 / OPTIMUS PAD / OPTIMUS PRO C660 / OPTIMUS SOL E730 / OPTIMUS VU / PRADA PHONE 3.0 / PURE GD550 / T315 / T385 / TOWN C300 / VIEWTY SMILE GT400 / VIEWTY SNAP GM360 / K11 / K40 / K40S / K50S / K9 (Candy) / Q6 / Q60

LOGICOM

E350 / E400 / E500 / S450 / S504

MICROSOFT

LUMIA 435 / LUMIA 530 / LUMIA 535 / LUMIA 540 / LUMIA 550 / LUMIA 635 / LUMIA 640 / LUMIA 640 XL / LUMIA 650 / LUMIA 830

MOTOROLA

ATRIX 3G / ATRIX 4G MB860 / BRAVO MB520 / DEFY + / DEFY MINI XT320 / DEXT / DROID PRO XT610 / DROID X / FIRE XT316 / FLIPSIDE MB508 / GLEAM / GLEAM PLUS / MILESTONE / MILESTONE 2 / MILESTONE XT720 / MOTO E 4G / MOTO E2 / MOTO G / MOTO G 2014 / MOTO G 3E GENERATION / MOTO X / MOTO X 2EME GENERATION / NEXUS 6 / PRO / PRO + / RAZR HD XT925 / RAZR I XT890 / RAZR XT910 / SPICE XT300 / WILDER EX130 / XOOM / MOTO C PLUS / MOTO E4 PLUS

NOKIA

208 / 3 / 301 / 3310 2017 / 500 / 603 / 6650 FOLD / 6700 CLASSIC / 700 ZETA / 701 / 7230 / 808 PUREVIEW / ASHA 200 / ASHA 201 / ASHA 202 / ASHA 203 / ASHA 300 / ASHA 302 / ASHA 303 / ASHA 305 / ASHA 306 / ASHA 308 / ASHA 311 / ASHA 501 / ASHA 503 / C2-01 / C2-02 / C2-03 / C2-05 / C2-06 / C3-01 TOUCH AND TYPE / C5 / C5-03 / C5-05 / C5-06 / C6-01 / C7-00 / E5 / E6-00 / E7 / LUMIA 1020 / LUMIA 1320 / LUMIA 1520 / LUMIA 510 / LUMIA 520 / LUMIA 532 / LUMIA 610 / LUMIA 620 / LUMIA 625 / LUMIA 630 / LUMIA 710 / LUMIA 720 / LUMIA 730 / LUMIA 735 / LUMIA 800 / LUMIA 820 / LUMIA 900 / LUMIA 920 / LUMIA 925 / LUMIA 930 / N8 / N9 / ORO / X / X2 / X2-02 / X2-05 / X3-02 TOUCH AND TYPE / X7-00 / XL / 1 2018 / 2 / 3.1 / 5 / 5.1 / 6

OPPO

A3 / A3S / A5 (2020) / A7 / A9 (2020) / AX7 / FIND X / R15 PRO / RX17 NEO

ORANGE

DIVE 71 / HI 4G / NEVA 80 / NURA / RISE 51 / RONO / TECNO N9 / HOLLYWOOD / NEVA PLAY / NEVA ZEN / RISE 52

PANASONIC

ELUGA / ELUGA POWER

SAMSUNG

B2710 / C3350 / C3520 / C3530 / C3595 / C3750 / CHAT 222 E2220 / CHAT 335 S3350 / CHAT 350 C3500 / CHAT 357 S3570 / CORBY II S3850 / E1270 / E2350B / E2530 / GALAXY 550 I5500 / GALAXY 551 I5510 / GALAXY A3 A300 / GALAXY A3 A310 2016 / GALAXY A5 A500 / GALAXY A5 A510 2016 / GALAXY A7 A700 / GALAXY A7 A710 2016 / GALAXY ACE 2 I8160 / GALAXY ACE 3 S7270 / GALAXY ACE 4 4G G357 / GALAXY ACE PLUS S7500 / GALAXY ACE S5830 / GALAXY ACE S5830 ZV / GALAXY ALPHA G850 / GALAXY BEAM I8530 / GALAXY CAMERA GC100 / GALAXY CORE 4G G386 / GALAXY CORE I8260 / GALAXY CORE PLUS G3500 / GALAXY CORE PRIME G360 / GALAXY CORE PRIME VE / GALAXY EXPRESS 2 / GALAXY EXPRESS I8730 / GALAXY FAME LITE S6790 / GALAXY FAME S6810 / GALAXY FIT S5670 / GALAXY GIO S5660 / GALAXY GRAND 2 G7100 / GALAXY GRAND I9082 / GALAXY GRAND NEO I9060 / GALAXY GRAND PRIME G530 / GALAXY I7500 / GALAXY J1 J100 / GALAXY J1 J120 2016 / GALAXY J3 J320 2016 / GALAXY J3 J330 2017 / GALAXY J5 J500 / GALAXY J5 J510 2016 / GALAXY J7 J710 2016 / GALAXY K ZOOM C115 / GALAXY M PRO B7800 / GALAXY MEGA 5.8 I9150 / GALAXY MEGA I9200 / GALAXY MINI 2 S6500 / GALAXY MINI S5570 / GALAXY NAOS I5801 / GALAXY NEXUS I9250 / GALAXY NOTE 10.1 2014 P600 / GALAXY NOTE 2 N7100 / GALAXY NOTE 3 LITE N7505 / GALAXY NOTE 3 N9000 / GALAXY NOTE 4 N910 / GALAXY NOTE 8.0 N5100 / GALAXY NOTE EDGE N915 / GALAXY NOTE N7000 / GALAXY POCKET 2 G110 / GALAXY POCKET NEO S5310 / GALAXY POCKET PLUS S5301 / GALAXY POCKET S5300 / GALAXY POP PLUS S5570I / GALAXY PRO B7510 / GALAXY R I9103 / GALAXY S 2 I9100 / GALAXY S 2 I9100 NFC / GALAXY S 2 LTE I9210 / GALAXY S 2 PLUS I9105 / GALAXY S 3 4G I9305 / GALAXY S 3 I9300 / GALAXY S 3 MINI I8190 / GALAXY S 4 ACTIVE I9295 / GALAXY S 4 I9500 / GALAXY S 4 MINI I9190 / GALAXY S 4 ZOOM / GALAXY S 5 G900 / GALAXY S 5 MINI G800 / GALAXY S 6 EDGE G925 / GALAXY S 6 EDGE PLUS G928 / GALAXY S 6 G920 / GALAXY S 7 EDGE G935 / GALAXY S 7 G930 / GALAXY S ADVANCE I9070 / GALAXY S I9000 / GALAXY S PLUS I9001 / GALAXY S SCL I9003 / GALAXY TAB 10.1 2016 T850 / GALAXY TAB 10.1 P7100 / GALAXY TAB 3 10.1 P5210 / GALAXY TAB 3 7.0 T210 / GALAXY TAB 3 8.0 T310 / GALAXY TAB 3 LITE 7.0 T110 / GALAXY TAB 4 10.1 T530 / GALAXY TAB 4 7.0 T230 / GALAXY TAB A 9.7 SM-T550 / Galaxy Tab E / GALAXY TAB PRO 10.1 T520 / GALAXY TAB PRO 8.4 T320 / GALAXY TAB S 10.5 T800 / GALAXY TAB S 8.4 T700 / GALAXY TAB S2 8.0 T710 / GALAXY TAB S2 9.7 T810 / GALAXY TEOS I5800 / GALAXY TREND 2 LITE G318 / GALAXY TREND LITE S7390 / GALAXY TREND PLUS S7580 / GALAXY TREND S7560 / GALAXY W I8150 / GALAXY XCOVER 2 S7710 / GALAXY XCOVER 3 G388 / GALAXY XCOVER 4 / GALAXY XCOVER S5690 / GALAXY Y PRO B5510 / GALAXY Y S5360 / GALAXY YOUNG 2 G130 / GALAXY YOUNG S6310 / GOOGLE NEXUS 10 P8110 / MISS PLAYER S7070 / NEXUS S I9023 / OMNIA 7 I8700 / OMNIA M S7530 / OMNIA W I8350 / PLAYER CITY S5260 / PLAYER FIVE S5560 / PLAYER HD I8910 / PLAYER MINI 2 C3310 / PLAYER MINI C3300 / PLAYER STAR 2 S5620 / PLAYER STAR S5600 / PLAYER ULTRA S8300 / REX 70 S3800 / S5610 / SHARK S5350 / SMILEY T359 / STAR 3 S5220 / WAVE 3 S8600 / WAVE 533 S5330 / WAVE 575 S5750 / WAVE 578 S5780 / WAVE 723 S7230 / WAVE II S8530 / WAVE M S7250 / WAVE ONE S5250 / WAVE S8500 / WAVE Y S5380 / GALAXY A10 A105 / GALAXY A6 A600 2018 / GALAXY A6+ A605 2018 / GALAXY A7 A750 2018 / GALAXY J2 PRO J250 2018 / GALAXY J4 CORE / GALAXY J4+ J415 / GALAXY J5 J530 2017 / GALAXY J6 J600 / GALAXY J6+ J610 / GALAXY J7 J730 2017 / GALAXY TAB A 10.1 T580 (2016) / GALAXY TAB A 7 T280 (2016) / GALAXY TAB S4 10.5 T830

SFR

S BY SFR 101 / S BY SFR 102 / S BY SFR 116 / S BY SFR 118 / S BY SFR 1180 / S BY SFR 124 / S BY SFR 501 / S BY SFR C1 / SFR S BY SFR 117 / STARACTIVE / STARADDICT 2 / STARADDICT 2 PLUS / STARADDICT 3 / STARADDICT 4 / STARADDICT 5 / STARADDICT 6 / STARNAUTE 2 / STARNAUTE 3 / STARSHINE / STARSHINE 2 / STARSHINE 3 / STARSHINE 4 / STARSHINE 5 / STARTEXT 2 / STARTRAIL 2 / STARTRAIL 3 / STARTRAIL 4 / STARTRAIL 5 / STARTRAIL 6 / STARTRAIL 6 PLUS / STARTRAIL 7 / STARTRAIL 8 / STARXTREM / STARXTREM 4 / STARXTREM 5 / STARXTREM 6 / STARXTREM II / TEXT EDITION 153 / WINDOWS PHONE INTERNET 7 / STARACTIVE 2 / STARTRAIL 9

SONY

ASPEN / LIVE WITH WALKMAN / MIX WALKMAN / SPIRO / TABLET S / TXT / TXT PRO / VIVAZ PRO / VIVAZ U5 / W8 / XPERIA ACTIVE / XPERIA ARC / XPERIA ARC S / XPERIA C3 / XPERIA C4 / XPERIA C5 ULTRA / XPERIA E / XPERIA E1 / XPERIA E3 / XPERIA E4 / XPERIA E4G / XPERIA E5 / XPERIA GO / XPERIA ION / XPERIA J / XPERIA KYNO / XPERIA KYNO V / XPERIA M / XPERIA M2 / XPERIA M4 AQUA / XPERIA M5 / XPERIA MINI / XPERIA MINI PRO / XPERIA MIRO / XPERIA P / XPERIA PLAY / XPERIA PRO / XPERIA RAY / XPERIA S / XPERIA SOLA / XPERIA SP / XPERIA T / XPERIA T2 ULTRA / XPERIA T3 / XPERIA TABLET Z / XPERIA TIPO / XPERIA U / XPERIA X / XPERIA X10 / XPERIA X10 MINI / XPERIA X10 MINI PRO / XPERIA X8 / XPERIA XA / XPERIA Z / XPERIA Z ULTRA / XPERIA Z1 / XPERIA Z1 COMPACT / XPERIA Z2 / XPERIA Z3 / XPERIA Z3 COMPACT / XPERIA Z3+ / XPERIA Z5 / XPERIA Z5 COMPACT / XPERIA Z5 PREMIUM / XPERIA ZL / XPERIA L2

SOSH

LE MOBILE SOSH / SOSHPHONE MINI

WIKO

BARRY / BIRDY / BLOOM / BLOOM 2 / CINK / CINK FIVE / CINK KING / CINK PEAX / CINK PEAX 2 / CINK PLUS / CINK SLIM / DARKFULL / DARKMOON / DARKKNIGHT / DARKSIDE / DEA / DUELLE / FEVER / FREDDY / GETAWAY / GOA / HIGHWAY / HIGHWAY PURE 4G / HIGHWAY SIGNS / HIGHWAY STAR 4G / IGGY / JERRY / JIMMY / KITE / LENNY / LENNY 2 / LENNY 3 / OZZY / PULP 4G / PULP FAB / RAINBOW / RAINBOW 4G / RAINBOW JAM 3G / RAINBOW JAM 4G / RAINBOW LITE 4G / RAINBOW UP 4G / RIDGE 4G / RIDGE FAB 4G / ROBBY / SELFY 4G / SLIDE / SOAP / STAIRWAY / SUBLIM / SUNNY / SUNSET / SUNSET 2 / TOMMY / U FEEL / U FEEL LITE / U FEEL PRIME / VENIA / WAX / HARRY / HARRY 2 / JERRY 2 / JERRY 3 / LENNY 4 / LENNY 5 / SUNNY 2 / SUNNY 2 PLUS / SUNNY 3 / TOMMY 2 / TOMMY 2 PLUS / TOMMY 3 / U PULSE / U PULSE LITE / VIEW / VIEW 3 / VIEW 3 LITE / VIEW 4 / VIEW 4 LITE / VIEW GO / VIEW LITE / VIEW MAX / VIEW PRIME / VIEW XL / VIEW2 / WIM / WIM LITE / Y50 / Y60 / Y80

XIAOMI

MI A2 / REDMI 5 / REDMI 6 / REDMI 6A / REDMI 7 / REDMI 7A / REDMI GO / REDMI NOTE 5 / REDMI NOTE 5 AL DUAL CAMERA / REDMI S2

ZTE

BLADE A452 / BLADE Q / BLADE S / BLADE V7 LITE / ERA / FTV / GRAND MEMO V9815 / GRAND X IN / MIMOSA X / ORBIT / R236 / R237 / R620 / S203 / SKATE / SKATE MESSAGE / STYLE Q / TANIA / X991