



OTTER BOX

Etui Drybox OtterBox

Rangez, cachez et protégez avec le Drybox OtterBox

GENCODE :
0660543408369



REF. :

OBDRYBOX3250B

Caractéristiques

- Etui Drybox noir OtterBox
- Étanche jusqu'à plus de 27 mètres de profondeur pendant 30 minutes (IP68)
- Fabrication robuste en polycarbonate
- Charnière en acier inoxydable et goupilles de verrouillage
- Doublure intérieure en mousse
- Trous de fixation
- Loquets résistants faciles à ouvrir
- Fente de libération de pression

Atout

- Norme IP68
- Ultra renforcée
- Rangement pour mobile et autres (clés, etc.)

Matière	Polycarbonate, acier inoxydable et mousse de polyéthylène
Dimensions	Externes : 211 x 129 x 65 mm / Internes : 175 x 94 x 51 mm
Couleur	Noir
Contenu du pack	1 Etui Drybox OtterBox

MOBILES COMPATIBLES

ACER

ALLEGRO / BE TOUCH E100 / BE TOUCH E110 / BE TOUCH E120 / BE TOUCH E130 / BE TOUCH E140 / BE TOUCH E200 / BE TOUCH E210 / BE TOUCH E400 / CLOUDMOBILE S500 / ICONIA SMART / LIQUID / LIQUID E1 / LIQUID E2 / LIQUID EXPRESS E320 / LIQUID GALLANT E350 / LIQUID GLOW / LIQUID METAL / LIQUID MINI / LIQUID S100 / LIQUID STREAM / LIQUID Z110 / LIQUID Z2 / LIQUID Z200 / LIQUID Z3 / NEW TOUCH S200

ALCATEL

A3 / A3 XL / A5 LED / IDOL 3 (4.7) / IDOL 3 (5.5) / IDOL 4 / ONE TOUCH GOPLAY / ONE TOUCH IDOL / ONE TOUCH IDOL 2S / ONE TOUCH IDOL MINI / ONE TOUCH IDOL S / ONE TOUCH IDOL ULTRA / ONE TOUCH M'POP / ONE TOUCH PIXI 3 4 POUCES / ONE TOUCH POP S3 / ONE TOUCH STAR / ONE TOUCH X POP / OT-112 / OT-113 / OT-203 / OT-213 / OT-305 / OT-306 / OT-355 / OT-361 / OT-505 / OT-506 / OT-506D / OT-655 / OT-803 / OT-808 / OT-838 / OT-890 / OT-990 / OT-995 / OT-996 / OT-997 / PIXI 3 3.5 / PIXI 3 4 / PIXI 3 4.5 / PIXI 4 3G / PIXI 4 5 / POP 2 4.5 / POP 3 5.0 / POP 4 / POP C1 / POP C5 / POP C7 / POP C9 / POP S7 / U5 / 1X (5059) / 3 (5052) / 3C (5026) / 3V (5099) / 3X (5058) / 5V (5060)

APPLE

IPHONE 3G / IPHONE 3GS / IPHONE 4 / IPHONE 4S / IPHONE 5 / IPHONE 5C / IPHONE 5S / IPHONE 6 / IPHONE 6 PLUS / IPHONE 6S / IPHONE 6S PLUS / IPHONE 7 / IPHONE 7 PLUS / IPHONE 7 PLUS RED / IPHONE 7 RED / IPHONE 8 / IPHONE 8 PLUS / IPHONE SE / IPHONE X / IPOD TOUCH

ARCHOS

40 TITANIUM / 45 HELIUM 4G / SAPHIR 50X

ASUS

NUVIFONE A10 / NUVIFONE A50 / NUVIFONE G60 / NUVIFONE M10 / P835 / PADFONE / PADFONE 2 / ZENFONE 2 ZE500 CL / ZENFONE 2 ZE550 ML / ZENFONE 3 MAX ZC520TL / ZENFONE 4 MAX PLUS ZC554KL / ZENFONE MAX PRO M1 ZB601KL

BBOX

BBOX / BBOX MIAMI

BLACKBERRY

9720 / BOLD 9000 / BOLD 9700 / BOLD 9780 / BOLD 9790 / BOLD TOUCH 9900 / BOLD TOUCH 9930 / CLASSIC / CURVE 3G 9300 / CURVE 8520 / CURVE 9320 / CURVE 9360 / CURVE 9380 / LEAP / PASSPORT / PEARL 3G 9100 / PEARL 3G 9105 / PEARL 8100 / PRIV / Q10 / Q5 / TORCH 9800 / TORCH 9810 / TORCH 9860 / Z10 / KEY2

BOUYGUES TELECOM

BC 211 / BC311 / BS351 / BS401 / BS402 / BS403 / BS451 / BS471 / ULTYM 4 / ULTYM 4 MAXI / ULTYM 5 / ULTYM 5.2

CROSSCALL

SPIDER X1 / TREKKER X3 / TREKKER M 1

DELL

AERO / MINI 3IX / STREAK / THUNDER / VENUE PRO / XCD28 / XCD35

DORO

HANDLEEASY 328GSM / HANDLEEASY 330GSM / HANDLEPLUS 326 / HANDLEPLUS 334 / LIBERTO 820 MINI / LIBERTO 822 / PHONEEASY 332GSM / PHONEEASY 338GSM / PHONEEASY 341GSM / PHONEEASY 342 / PHONEEASY 345 / PHONEEASY 409GSM / PHONEEASY 410 / PHONEEASY 610 / PHONEEASY 612 / PHONEEASY 615 / 8031

ECHO

DUNE / FEELING / FUSION / HALO / HORIZON / HORIZON LITE / HORIZON LITE PLUS / HORIZON M / JAVA / LOOK / MOON / PUSH / SMART4G / STAR / STELLAR / STELLAR 4G / VOLT / WIZ

FUJITSU

STYLISTIC S01

GOOGLE

PIXEL 2 / PIXEL 2 XL / PIXEL 3 / PIXEL 3 XL

HONOR

HONOR 5C / HONOR 5X / HONOR 6 PLUS / HONOR 6A / HONOR 6C / HONOR 6X / HONOR 7 / HONOR 8 / HONOR 9 / HONOR 10 / HONOR 7A / HONOR 7C / HONOR 7S / HONOR 8A / HONOR 9 LITE / HONOR PLAY

HP

PRE 3 / VEER

HTC

10 / 7 MOZART / 7 PRO / 7 TROPHY / ARIA / CHACHA / DESIRE 10 LIFESTYLE / DESIRE 310 / DESIRE 510 / DESIRE 530 / DESIRE 601 / DESIRE 610 / DESIRE 620 / DESIRE 626 / DESIRE 650 / DESIRE 816 / DESIRE 820 / DESIRE 825 / DESIRE C / DESIRE EYE / DESIRE HD / DESIRE S / DESIRE X / DESIRE Z / EVO 3D / EXPLORER / GOOGLE NEXUS ONE / GRATIA / HD MINI / HD2 / HD7 / INCREDIBLE S / MAGIC / ONE / ONE A9 / ONE M8 / ONE M9 / ONE MINI / ONE MINI 2 / ONE S / ONE SV / ONE V / ONE X / ONE X PLUS / One X9 / ONE XL / RADAR / RHYME / SALSA / SENSATION / SENSATION EX / SENSATION XL / SMART / TITAN / TOUCH HD MINI / TOUCH MAX 4G / TOUCH2 / U PLAY / U11 / WILDFIRE S / WINDOWS PHONE 8S / WINDOWS PHONE 8X

HUAWEI

ASCEND D QUAD / ASCEND D QUAD XL / ASCEND D1 / ASCEND G300 / ASCEND G6 / ASCEND G6 4G / ASCEND G620S / ASCEND G740 / ASCEND G750 / ASCEND MATE 7 / ASCEND P1 / ASCEND P1 S / ASCEND P7 / ASCEND Y330 / ASCEND Y530 / ASCEND Y550 / F616 / G330 / G6150 / IDEOS U8150 / IDEOS U8300 / IDEOS U8500 / IDEOS X5 U8800 / IDEOS X6 U9000 / MATE 8 / MATE 9 / MATE S / NEXUS 6P / NOVA / P10 / P10 Lite / P10 PLUS / P8 / P8 LITE 2016 / P8 LITE 2017 / P9 / P9 LITE / P9 PLUS / U8350 / Y3 / Y5 / Y5 II / Y6 / Y6 2017 / Y6 II / Y6 PRO 2017 / Y635 / MATE 10 PRO / MATE 20 LITE / P SMART / P20 / P20 LITE / P20 PRO / Y5 2018 / Y6 2018 / Y7 2018

KAZAM

THUNDER2 5.0 / TROOPER2 5.0

LENOVO

C2 / K5 / MOTO Z

LG

A110 / A120 / A133 / A155 / A170 / A200 / A250 / A290 / A310 / BELLO 2 / C105 / C310 / C320 / C330 / C360 / C710 / COOKIE 3G T320 / COOKIE FRESH GS290 / COOKIE LITE T300 / COOKIE LIVE KM570 / COOKIE PLUS GS500 / COOKIE STYLE T310 / F60 / F70 / FATHOM VS750 / G FLEX / G FLEX 2 / G PRO 2 / G3 / G3 S / G4 / G4 C / G4 STYLUS / G5 / G6 / GB102 / GB108 / GB110 / GB115 / GB210 / GB230 / GD330 / GM205 / GM310 / GM730 / GS105 / GS200 / GT350 / GT405 / GT540 / GW910 / GX200 / GX300 / GX500 / K10 / K4 / K7 / K8 / KP270 / KS365 / KS660 / KT610 / KT770 / KU250 / KU385 / L BELLO / L FINO / L65 / L70 / L80 / L90 / LEON 4G LTE / LOLLIPOP GD580 / MINI GD880 / NEXUS 4 E960 / NEXUS 5 / NEXUS X5 / OPTIMUS 2X P990 / OPTIMUS 3D MAX P720 / OPTIMUS 3D P920 / OPTIMUS 4X HD P880 / OPTIMUS 7 E900 / OPTIMUS BLACK P970 / OPTIMUS CHAT C550 / OPTIMUS CHIC E720 / OPTIMUS F5 P875 / OPTIMUS F6 D505 / OPTIMUS G / OPTIMUS L3 E400 / OPTIMUS L3 II E430 / OPTIMUS L4 II / OPTIMUS L5 E610 / OPTIMUS L5 II E460 / OPTIMUS L7 II P710 / OPTIMUS L7 P700 / OPTIMUS L9 P760 / OPTIMUS ME P350 / OPTIMUS NET / OPTIMUS ONE P500 / OPTIMUS PRO C660 / OPTIMUS SOL E730 / POPCORN GU280 / PRADA PHONE 3.0 / PURE GD550 / Q6 / SWIFT GT540 / T315 / T385 / TOWN C300 / VIEWTY SMILE GT400 / VIEWTY SNAP GM360 / K11 / K9 (Candy)

LOGICOM

E350 / E400 / E500 / S450 / S504

MICROSOFT

LUMIA 435 / LUMIA 530 / LUMIA 535 / LUMIA 540 / LUMIA 550 / LUMIA 635 / LUMIA 640 / LUMIA 640 XL / LUMIA 650 / LUMIA 830 / LUMIA 950 / LUMIA 950 XL

MOTOROLA

A3000 / ATRIX 3G / ATRIX 4G MB860 / BALI / BRAVO MB520 / CHARM / DEFY + / DEFY MINI XT320 / DEXT / DROID PRO XT610 / DROID X / E6 / EM28/EM330 / EM30 / EM35 / ES400 / EX115 / FIRE XT316 / FLIPOUT MB511 / FLIPSIDE MB508 / GLAM XT800 / GLEAM / GLEAM PLUS / KARMA QA1 / MILESTONE / MILESTONE 2 / MILESTONE XT720 / MOTO C PLUS / MOTO E 4G / MOTO E2 / MOTO E4 PLUS / MOTO G / MOTO G 2014 / MOTO G 3E / MOTO G 4G / MOTO X / MOTO X 2EME GENERATION / NEXUS 6 / PRO / PRO + / Q11 / RAMBLER / RAZR HD XT925 / RAZR I XT890 / RAZR V3 / RAZR V3I / RAZR XT910 / SPICE XT300 / V1100 / W160/W156 / W181 / W388 / W396 / WILDER EX130 / WX295 / WX404 / XT3 XT502 / XT5 XT502 / G6

NOKIA

100 / 101 / 108 / 112 / 113 / 1202 / 208 / 2220 SLIDE / 2310 / 2680 SLIDE / 2710 NAVIGATOR / 3 / 301 / 3310 2017 / 5 / 500 / 5235 CWM / 5250 / 6 / 603 / 6133B / 6267 / 6288 / 6350 / 6650 FOLD / 6700 CLASSIC / 6700 SLIDE / 700 ZETA / 701 / 7210 SUPERNOVA / 7230 / 808 PUREVIEW / ASHA 200 / ASHA 201 / ASHA 202 / ASHA 203 / ASHA 300 / ASHA 302 / ASHA 303 / ASHA 305 / ASHA 306 / ASHA 308 / ASHA 311 / ASHA 501 / ASHA 503 / C1-00 / C1-01 / C1-02 / C2-00 / C2-01 / C2-02 / C2-03 / C2-05 / C2-06 / C3 / C3-01 TOUCH AND TYPE / C5 / C5-03 / C5-05 / C5-06 / C6 / C6-01 / C7-00 / E5 / E6-00 / E7 / LUMIA 1020 / LUMIA 1320 / LUMIA 1520 / LUMIA 510 / LUMIA 520 / LUMIA 532 / LUMIA 610 / LUMIA 620 / LUMIA 625 / LUMIA 630 / LUMIA 710 / LUMIA 720 / LUMIA 730 / LUMIA 735 / LUMIA 800 / LUMIA 820 / LUMIA 900 / LUMIA 920 / LUMIA 925 / LUMIA 930 / MURAL 6750 / N1800 / N2730 / N7020 / N71 / N77 / N8 / N800 / N81 8GB / N810 WI-MAX / N9 / ORO / SURGE 6790 / X / X1-00 / X1-01 / X2 / X2-01 / X2-02 / X2-05 / X3-02 TOUCH AND TYPE / X5-01 / X7-00 / XL / 2 / 3.1 / 5.1 PLUS / 7 PLUS / 7.1

OPPO

A3 / A3S / FIND X / R15 PRO / RX17 NEO

ORANGE

DIVE 71 / HI 4G / NEVA 80 / NURA / RISE 51 / RONO / TECNO N9

PANASONIC

ELUGA / ELUGA POWER

SAGEM

SAMSUNG

B2100 / B2710 / B7722 / C3200 / C3350 / C3520 / C3530 / C3595 / C3750 / CHAT 222 E2220 / CHAT 335 S3350 / CHAT 350 C3500 / CHAT 357 S3570 / CORBY II S3850 / E1050 / E1150 / E1170 / E1190 / E1252 / E1270 / E2100 / E2152 / E2230 / E2330 / E2350B / E2370 / E2530 / GALAXY 550 I5500 / GALAXY 551 I5510 / GALAXY A3 A300 / GALAXY A3 A310 2016 / GALAXY A3 A320 2017 / GALAXY A5 A500 / GALAXY A5 A510 2016 / GALAXY A5 A520 2017 / GALAXY A7 A700 / GALAXY A7 A710 2016 / GALAXY ACE 2 I8160 / GALAXY ACE 3 S7270 / GALAXY ACE 4 4G G357 / GALAXY ACE PLUS S7500 / GALAXY ACE S5830 / GALAXY ACE S5830 ZV / GALAXY ALPHA G850 / GALAXY BEAM I8530 / GALAXY CAMERA GC100 / GALAXY CORE 4G G386 / GALAXY CORE I8260 / GALAXY CORE PLUS G3500 / GALAXY CORE PRIME G360 / GALAXY CORE PRIME VE / GALAXY EXPRESS 2 / GALAXY EXPRESS I8730 / GALAXY FAME LITE S6790 / GALAXY FAME S6810 / GALAXY FIT S5670 / GALAXY GIO S5660 / GALAXY GRAND 2 G7100 / GALAXY GRAND I9082 / GALAXY GRAND NEO I9060 / GALAXY GRAND PRIME G530 / GALAXY i7500 / GALAXY J1 J100 / GALAXY J1 J120 2016 / GALAXY J3 J320 2016 / GALAXY J3 J330 2017 / GALAXY J5 J500 / GALAXY J5 J510 2016 / GALAXY J5 J530 2017 / GALAXY J7 J710 2016 / GALAXY J7 J730 2017 / GALAXY K ZOOM C115 / GALAXY M PRO B7800 / GALAXY MEGA 5.8 I9150 / GALAXY MEGA I9200 / GALAXY MINI 2 S6500 / GALAXY MINI S5570 / GALAXY NAOOS I5801 / GALAXY NEXUS I9250 / GALAXY NOTE 2 N7100 / GALAXY NOTE 3 LITE N7505 / GALAXY NOTE 3 N9000 / GALAXY NOTE 4 N910 / GALAXY NOTE EDGE N915 / GALAXY NOTE N7000 / GALAXY NOTE8 N950 / GALAXY POCKET 2 G110 / GALAXY POCKET NEO S5310 / GALAXY POCKET PLUS S5301 / GALAXY POCKET S5300 / GALAXY POP PLUS S5570i / GALAXY PRO B7510 / GALAXY R I9103 / GALAXY S 2 I9100 / GALAXY S 2 I9100 NFC / GALAXY S 2 LTE I9210 / GALAXY S 2 PLUS I9105 / GALAXY S 3 4G I9305 / GALAXY S 3 I9300 / GALAXY S 3 MINI I8190 / GALAXY S 4 ACTIVE I9295 / GALAXY S 4 I9500 / GALAXY S 4 MINI I9190 / GALAXY S 4 ZOOM / GALAXY S 5 G900 / GALAXY S 5 MINI G800 / GALAXY S 6 EDGE G925 / GALAXY S 6 EDGE PLUS G928 / GALAXY S 6 G920 / GALAXY S 7 EDGE G935 / GALAXY S 7 G930 / GALAXY S 8 + G955 / GALAXY S 8 G950 / GALAXY S ADVANCE I9070 / GALAXY S I9000 / GALAXY S PLUS I9001 / GALAXY S SCL I9003 / GALAXY TEOS I5800 / GALAXY TREND 2 LITE G318 / GALAXY TREND LITE S7390 / GALAXY TREND PLUS S7580 / GALAXY TREND S7560 / GALAXY W I8150 / GALAXY XCOVER 2 S7710 / GALAXY XCOVER 3 G388 / GALAXY XCOVER 4 / GALAXY XCOVER S5690 / GALAXY Y PRO B5510 / GALAXY Y S5360 / GALAXY YOUNG 2 G130 / GALAXY YOUNG S6310 / GIORGIO ARMANI B7620 / GRAVITY 2 T469 / GRAVITY 3 T479 / GRAVITY T T669 / M2520 / MISS PLAYER S7070 / NEXUS S I9023 / OMNIA 7 I8700 / OMNIA M S7530 / OMNIA PRO 4 B7350 / OMNIA PRO 5 B6520 / OMNIA W I8350 / PLAYER ADDICT I900 / PLAYER CITY S5260 / PLAYER F490 / PLAYER FIVE S5560 / PLAYER HD I8910 / PLAYER LIGHT C3510 / PLAYER MINI 2 C3310 / PLAYER MINI C3300 / PLAYER ONE S5230 / PLAYER STAR 2 S5620 / PLAYER STAR S5600 / PLAYER STYLE F480 / PLAYER ULTRA S8300 / REX 70 S3800 / S5610 / S7200 / SGH-C300 / SGH-D500 / SGH-D520 / SGH-E250 / SGH-E900 / SGH-S400i / SGH-S401i / SGH-S500i / SGH-S501i / SGH-Z650i / SHARK S5350 / SMILEY T359 / STAR 3 S5220 / WAVE 3 S8600 / WAVE 533 S5330 / WAVE 575 S5750 / WAVE 578 S5780 / WAVE 723 S7230 / WAVE II S8530 / WAVE M S7250 / WAVE ONE S5250 / WAVE S8500 / WAVE Y S5380 / GALAXY A6 A600 2018 / GALAXY A6+ A605 2018 / GALAXY A8 A530 2018 / GALAXY J2 PRO J250 2018 / GALAXY J6 J600 / GALAXY NOTE9 N960 / GALAXY S 10 + G975 / GALAXY S 10 5G G977 / GALAXY S 9 G960

SFR

S BY SFR 101 / S BY SFR 102 / S BY SFR 116 / S BY SFR 118 / S BY SFR 1180 / S BY SFR 124 / S BY SFR 501 / S BY SFR C1 / SFR 115 / SFR 151 / SFR 242 / SFR 251 / X990 / SFR 261 / SFR S BY SFR 117 / SFR S BY SFR 123 / STARACTIVE / STARACTIVE 2 / STARADDICT / STARADDICT 2 / STARADDICT 2 PLUS / STARADDICT 3 / STARADDICT 4 / STARADDICT 5 / STARADDICT 6 / STARNAUTE / STARNAUTE 2 / STARNAUTE 3 / STARSHINE / STARSHINE 2 / STARSHINE 3 / STARSHINE 4 / STARSHINE 5 / STARTEXT 2 / STARTRAIL / STARTRAIL 2 / STARTRAIL 3 / STARTRAIL 4 / STARTRAIL 5 / STARTRAIL 6 / STARTRAIL 6 PLUS / STARTRAIL 7 / STARTRAIL 8 / STARTRAIL 9 / STARXTREM / STARXTREM 4 / STARXTREM 5 / STARXTREM 6 / STARXTREM II / TEXT EDITION 153 / WINDOWS PHONE INTERNET 7

SONY

ASPEN / CEDAR / ELM / HAZEL / JALOU / K750 / K770 / K800 / LIVE WITH WALKMAN / MIX WALKMAN / NAITE / S500 / SPIRO / TXT / TXT PRO / VIVAZ PRO / VIVAZ U5 / W8 / W810 / XPERIA ACTIVE / XPERIA ARC / XPERIA ARC S / XPERIA C3 / XPERIA C4 / XPERIA C5 ULTRA / XPERIA E / XPERIA E1 / XPERIA E3 / XPERIA E4 / XPERIA E4G / XPERIA E5 / XPERIA GO / XPERIA ION / XPERIA J / XPERIA KYNO / XPERIA KYNO V / XPERIA L1 / XPERIA M / XPERIA M2 / XPERIA M4 AQUA / XPERIA M5 / XPERIA MINI / XPERIA MINI PRO / XPERIA MIRO / XPERIA P / XPERIA PLAY / XPERIA PRO / XPERIA PURENESS / XPERIA RAY / XPERIA S / XPERIA SOLA / XPERIA SP / XPERIA T / XPERIA T2 ULTRA / XPERIA T3 / XPERIA TIPO / XPERIA U / XPERIA X / XPERIA X COMPACT / XPERIA X1 / XPERIA X10 / XPERIA X10 MINI / XPERIA X10 MINI PRO / XPERIA X8 / XPERIA XA / XPERIA XA ULTRA / XPERIA XA1 / XPERIA XA1 ULTRA / XPERIA XZ / XPERIA XZ PREMIUM / XPERIA Z / XPERIA Z1 / XPERIA Z1 COMPACT / XPERIA Z2 / XPERIA Z3 / XPERIA Z3 COMPACT / XPERIA Z3+ / XPERIA Z5 / XPERIA Z5 COMPACT / XPERIA Z5 PREMIUM / XPERIA ZL / YARI / YENDO W150 / Z610 / ZYLO / XPERIA L2 / XPERIA XA2 / XPERIA XZ2 / XPERIA XZ2 COMPACT

SOSH

LE MOBILE SOSH / SOSHPHONE MINI

WIKO

BARRY / BIRDY / BLOOM / BLOOM 2 / CINK / CINK FIVE / CINK KING / CINK PEAX / CINK PEAX 2 / CINK PLUS / CINK SLIM / DARKFULL / DARKMOON / DARKNIGHT / DARKSIDE / DEA / DUELLE / FEVER / FREDDY / GETAWAY / GOA / HIGHWAY / HIGHWAY PURE 4G / HIGHWAY SIGNS / HIGHWAY STAR 4G / IGGY / JERRY / JERRY 2 / JIMMY / KITE / LENNY / LENNY 2 / LENNY 3 / LENNY 4 / OZZY / PULP 4G / PULP FAB / RAINBOW / RAINBOW 4G / RAINBOW JAM 3G / RAINBOW JAM 4G / RAINBOW LITE 4G / RAINBOW UP 4G / RIDGE 4G / RIDGE FAB 4G / ROBBY / SELFY 4G / SLIDE / SOAP / STAIRWAY / SUBLIM / SUNNY / SUNSET / SUNSET 2 / TOMMY / TOMMY 2 / U FEEL / U FEEL LITE / U FEEL PRIME / U PULSE / U PULSE LITE / VENIA / WAX / WIM / WIM LITE / HARRY / LENNY 5 / SUNNY 3 / VIEW GO / VIEW MAX / VIEW XL / VIEW2

XIAOMI

BLACK SHARK HELO / MI 8 / MI A2 / MI MIX 2 / MI MIX 2S / REDMI 6 / REDMI 6A / REDMI NOTE 5 / REDMI NOTE 5 AL DUAL CAMERA

ZTE

BLADE / BLADE A452 / BLADE Q / BLADE S / BLADE V7 LITE / FTV / GRAND MEMO V9815 / GRAND X IN / LINK / MIMOSA X / N290 / ORBIT / R236 / R237 / R620 / S202 / S203 / S213 / SKATE / SKATE MESSAGE / STYLE Q / TANIA / X991