



# BIGBEN CONNECTED

Batterie de secours + câble USB/micro USB + adaptateur USB C

Une batterie de secours pour pouvoir recharger son smartphone n'importe où

GENCODE :  
3571211385585



REF. :  
**PBPOLY10000CMICS**

## Caractéristiques

Batterie de secours 10000 mAh argentée avec câble USB/micro USB intégré et adaptateur USB C :

- Capacité : 10000 mAh
- Ampérage d'entrée : 5V, 1.5A
- Ampérage de sortie : 5V, 1A
- Permet de recharger jusqu'à 4 fois votre mobile entièrement
- Charge rapide
- Affichage LED du niveau de charge
- Câble USB/micro USB inclus

## Atout

Compact  
10000 mAh

Couleur	Argenté
Contenu du pack	1 batterie de secours 10000 mAh + 1 câble USB/micro USB + 1 adaptateur USB C

## MOBILES COMPATIBLES

### ACER

ALLEGRO / BE TOUCH E100 / BE TOUCH E110 / BE TOUCH E120 / BE TOUCH E130 / BE TOUCH E140 / BE TOUCH E200 / BE TOUCH E210 / BE TOUCH E400 / CLOUDMOBILE S500 / ICONIA SMART / ICONIA TAB A100 / ICONIA TAB A500 / ICONIA TAB A501 / ICONIA TAB B1-A71 / LIBERTY TAB / LIQUID / LIQUID E1 / LIQUID E2 / LIQUID EXPRESS E320 / LIQUID GALLANT E350 / LIQUID GLOW / LIQUID METAL / LIQUID MINI / LIQUID S100 / LIQUID STREAM / LIQUID Z110 / LIQUID Z2 / LIQUID Z200 / LIQUID Z3 / NEW TOUCH S200

### ALCATEL

1 (5033) / 1B 2020 / 1S (5024) / 1S 2020 / 1X (5059) / 1X 2019 (5008) / 3 (5052) / 3C (5026) / 3L (5034) / 3L 2020 / 3V (5099) / 3X (5058) / 3X 2019 (5048) / 5 (5086) / 5V (5060) / A3 / A3 XL / A5 LED / IDOL 3 (4.7) / IDOL 3 (5.5) / IDOL 4 / ONE TOUCH GOPLAY / ONE TOUCH IDOL / ONE TOUCH IDOL 2S / ONE TOUCH IDOL MINI / ONE TOUCH IDOL S / ONE TOUCH IDOL ULTRA / ONE TOUCH M'POP / ONE TOUCH PIXI 3 4 POUCES / ONE TOUCH POP S3 / ONE TOUCH STAR / ONE TOUCH X POP / OT-112 / OT-113 / OT-203 / OT-213 / OT-305 / OT-306 / OT-355 / OT-361 / OT-505 / OT-506 / OT-506D / OT-655 / OT-803 / OT-808 / OT-838 / OT-890 / OT-990 / OT-995 / OT-996 / OT-997 / OT-997 / PIXI 3 3.5 / PIXI 3 4 / PIXI 3 4.5 / PIXI 4 3G / PIXI 4 5 / POP 2 4.5 / POP 3 5.0 / POP 4 / POP C1 / POP C5 / POP C7 / POP C9 / POP S7 / U5

### APPLE

IPAD 9.7 (2018) / IPAD MINI 4 / IPAD PRO 10.5 / IPHONE 8 / IPHONE 8 PLUS / IPHONE X / IPHONE XR / IPHONE XS / IPHONE XS MAX / IPAD / IPAD 10.2 / IPAD 2 / IPAD 3 / IPAD 4 / IPAD 9.7 (2017) / IPAD AIR / IPAD AIR 2 / IPAD MINI / IPAD MINI 3 / IPAD MINI RETINA / IPAD PRO / IPAD PRO 11 (2018) / IPAD PRO 12.9 (2018) / IPAD PRO 9.7 / IPHONE 11 / IPHONE 11 PRO / IPHONE 11 PRO MAX / IPHONE 3G / IPHONE 3GS / IPHONE 4 / IPHONE 4S / IPHONE 5 / IPHONE 5C / IPHONE 5S / IPHONE 6 / IPHONE 6 PLUS / IPHONE 6S / IPHONE 6S PLUS / IPHONE 7 / IPHONE 7 PLUS / IPHONE 7 PLUS RED / IPHONE 7 RED / IPHONE SE / IPHONE SE (2020) / IPOD TOUCH

### ARCHOS

40 TITANIUM / 45 HELIUM 4G / SAPHIR 50X

### ASUS

GOOGLE NEXUS 7 / NEXUS 7 / NUVIFONE A10 / NUVIFONE A50 / NUVIFONE G60 / NUVIFONE M10 / P835 / PADFONE / PADFONE 2 / TF600 / TRANSFORMER PAD 300 / TRANSFORMER PAD INFINITY 700 / TRANSFORMER PRIME TF700T / ZENFONE 2 ZE500 CL / ZENFONE 2 ZE550 ML / ZENFONE 3 MAX ZC520TL / ZENFONE 4 MAX PLUS ZC554KL / ZENFONE 4 MAX ZC520KL / ZENFONE LIVE ZB501KL / ZENFONE MAX PRO M1 ZB601KL

### BBOX

BBOX / BBOX MIAMI

### BLACKBERRY

9720 / BOLD 9000 / BOLD 9700 / BOLD 9780 / BOLD 9790 / BOLD TOUCH 9900 / BOLD TOUCH 9930 / CLASSIC / CURVE 3G 9300 / CURVE 8520 / CURVE 9320 / CURVE 9360 / CURVE 9380 / KEY2 / LEAP / PASSPORT / PEARL 3G 9100 / PEARL 3G 9105 / PEARL 8100 / PLAYBOOK / PRIV / Q10 / Q5 / TORCH 9800 / TORCH 9810 / TORCH 9860 / Z10

### BOUYGUES TELECOM

BC 211 / BC311 / BS351 / BS401 / BS402 / BS403 / BS451 / BS471 / ULTYM 4 / ULTYM 4 MAXI / ULTYM 5 / ULTYM 5.2

### CROSSCALL

ACTION X3 / CORE M4 / CORE T4 / CORE X3 / CORE X4 / SPIDER X1 / TREKKER X3 / TREKKER M 1 / TREKKER X4

**DELL**

AERO / MINI 3IX / STREAK / STREAK 7 / THUNDER / VENUE PRO / XCD28 / XCD35

**DORO**

6050 / 7070 / 8042 / 5516 / 6530 / 8020X / 8031 / 8035 / 8040 / 825 / HANDLEEASY 328GSM / HANDLEEASY 330GSM / HANDLEPLUS 326 / HANDLEPLUS 334 / LIBERTO 820 MINI / LIBERTO 822 / PHONEEASY 332GSM / PHONEEASY 338GSM / PHONEEASY 341GSM / PHONEEASY 342 / PHONEEASY 345 / PHONEEASY 409GSM / PHONEEASY 410 / PHONEEASY 610 / PHONEEASY 612 / PHONEEASY 615 / SECURE 580/580 IUP

**ECHO**

BUZZ / DUNE / FEELING / FLOW / FUSION / HALO / HORIZON / HORIZON LITE / HORIZON LITE PLUS / HORIZON M / JAVA / LOLLY / LOOK / MOON / NOTE / PUSH / SMART4G / STAR / STELLAR / STELLAR 4G / SURF / VOLT / WIZ

**FUJITSU**

STYLISTIC S01

**GOOGLE**

PIXEL 2 / PIXEL 2 XL / PIXEL 3 / PIXEL 3 XL / PIXEL 3a / PIXEL 4 / PIXEL 4 XL

**HONOR**

HONOR 10 / HONOR 10 LITE / HONOR 20 / HONOR 20 LITE / HONOR 5C / HONOR 5X / HONOR 6 PLUS / HONOR 6A / HONOR 6C / HONOR 6C PRO / HONOR 6X / HONOR 7 / HONOR 7A / HONOR 7C / HONOR 7S / HONOR 7X / HONOR 8 / HONOR 8A / HONOR 8S / HONOR 8X / HONOR 9 / HONOR 9 LITE / HONOR 9X / HONOR PLAY / VIEW 10 / VIEW 20

**HP**

PRE 3 / TOUCHPAD / VEER

**HTC**

10 / 7 MOZART / 7 PRO / 7 TROPHY / ARIA / CHACHA / DESIRE 10 LIFESTYLE / DESIRE 12 / DESIRE 310 / DESIRE 510 / DESIRE 530 / DESIRE 601 / DESIRE 610 / DESIRE 620 / DESIRE 626 / DESIRE 650 / DESIRE 816 / DESIRE 820 / DESIRE 825 / DESIRE C / DESIRE EYE / DESIRE HD / DESIRE S / DESIRE X / DESIRE Z / EVO 3D / EXPLORER / FLYER / GOOGLE NEXUS ONE / GRATIA / HD MINI / HD2 / HD7 / INCREDIBLE S / MAGIC / NEXUS 9 / ONE / ONE A9 / ONE M8 / ONE M9 / ONE MINI / ONE MINI 2 / ONE S / ONE SV / ONE V / ONE X / ONE X PLUS / One X9 / ONE XL / RADAR / RHYME / SALSA / SENSATION / SENSATION EX / SENSATION XL / SMART / TITAN / TOUCH HD MINI / TOUCH MAX 4G / TOUCH2 / U PLAY / U11 / WILDFIRE S / WINDOWS PHONE 8S / WINDOWS PHONE 8X

**HUAWEI**

ASCEND D QUAD / ASCEND D QUAD XL / ASCEND D1 / ASCEND G300 / ASCEND G6 / ASCEND G6 4G / ASCEND G620S / ASCEND G740 / ASCEND G750 / ASCEND MATE 7 / ASCEND P1 / ASCEND P1 S / ASCEND P7 / ASCEND Y330 / ASCEND Y530 / ASCEND Y550 / F616 / G330 / G6150 / IDEOS S7 / IDEOS U8150 / IDEOS U8300 / IDEOS U8500 / IDEOS X5 U8800 / IDEOS X6 U9000 / MATE 10 LITE / MATE 10 PRO / MATE 20 / MATE 20 LITE / MATE 20 PRO / MATE 30 PRO / MATE 8 / MATE 9 / MATE S / MEDIAPAD T1 10 / MEDIAPAD T3 10 / MEDIAPAD T3 8 / NEXUS 6P / NOVA / NOVA 4 / NOVA 5T / P SMART / P SMART 2019 / P SMART 2020 / P SMART PRO 2019 / P SMART Z / P10 / P10 Lite / P10 PLUS / P20 / P20 LITE / P20 LITE 2019 / P20 PRO / P30 / P30 LITE / P30 PRO / P40 / P40 LITE / P40 LITE 5G / P40 PRO / P8 / P8 LITE 2016 / P8 LITE 2017 / P9 / P9 LITE / P9 PLUS / U8350 / Y3 / Y5 / Y5 2018 / Y5 2019 / Y5 II / Y5P / Y6 / Y6 2017 / Y6 2018 / Y6 2019 / Y6 II / Y6 PRO 2017 / Y635 / Y6P / Y6S (2019) / Y7 2018 / Y7 2019

**KAZAM**

THUNDER2 5.0 / TROOPER2 5.0

**LENOVO**

C2 / K5 / MOTO Z

**LG**

A110 / A120 / A133 / A155 / A170 / A200 / A250 / A290 / A310 / BELLO 2 / C105 / C310 / C320 / C330 / C360 / C710 / COOKIE 3G T320 / COOKIE FRESH GS290 / COOKIE LITE T300 / COOKIE LIVE KM570 / COOKIE PLUS GS500 / COOKIE STYLE T310 / F60 / F70 / FATHOM VS750 / G FLEX / G FLEX 2 / G PRO 2 / G2 / G3 / G3 S / G4 / G4 C / G4 STYLUS / G5 / G6 / GB102 / GB108 / GB110 / GB115 / GB210 / GB230 / GD330 / GM205 / GM310 / GM730 / GS105 / GS200 / GT350 / GT405 / GT540 / GW910 / GX200 / GX300 / GX500 / K10 / K11 / K4 / K40 / K40S / K50S / K7 / K8 / K9 (Candy) / KP270 / KS365 / KS660 / KT610 / KT770 / KU250 / KU385 / L BELLO / L FINO / L65 / L70 / L80 / L90 / LEON 4G LTE / LOLLIPOP GD580 / MINI GD880 / NEXUS 4 E960 / NEXUS 5 / NEXUS X5 / OPTIMUS 2X P990 / OPTIMUS 3D MAX P720 / OPTIMUS 3D P920 / OPTIMUS 4X HD P880 / OPTIMUS 7 E900 / OPTIMUS BLACK P970 / OPTIMUS CHAT C550 / OPTIMUS CHIC E720 / OPTIMUS F5 P875 / OPTIMUS F6 D505 / OPTIMUS G / OPTIMUS L3 E400 / OPTIMUS L3 II E430 / OPTIMUS L4 II / OPTIMUS L5 E610 / OPTIMUS L5 II E460 / OPTIMUS L7 II P710 / OPTIMUS L7 P700 / OPTIMUS L9 P760 / OPTIMUS ME P350 / OPTIMUS NET / OPTIMUS ONE P500 / OPTIMUS PAD / OPTIMUS PRO C660 / OPTIMUS SOL E730 / OPTIMUS VU / P520 / POPCORN GU280 / PRADA PHONE 3.0 / PURE GD550 / Q STYLUS + / Q6 / Q60 / SWIFT GT540 / T315 / T385 / TOWN C300 / VIEWTY SMILE GT400 / VIEWTY SNAP GM360

**LOGICOM**

E350 / E400 / E500 / S450 / S504

**MICROSOFT**

LUMIA 435 / LUMIA 530 / LUMIA 535 / LUMIA 540 / LUMIA 550 / LUMIA 635 / LUMIA 640 / LUMIA 640 XL / LUMIA 650 / LUMIA 830 / LUMIA 950 / LUMIA 950 XL / SURFACE / SURFACE GO

**MOTOROLA**

A3000 / ATRIX 3G / ATRIX 4G MB860 / BALI / BRAVO MB520 / CHARM / DEFY + / DEFY MINI XT320 / DEXT / DROID PRO XT610 / DROID X / E6 / EM28/EM330 / EM30 / EM35 / ES400 / EX115 / FIRE XT316 / FLIPOUT MB511 / FLIPSIDE MB508 / G6 / GLAM XT800 / GLEAM / GLEAM PLUS / KARMA QA1 / MILESTONE / MILESTONE 2 / MILESTONE XT720 / MOTO C PLUS / MOTO E 4G / MOTO E2 / MOTO E4 PLUS / MOTO G / MOTO G 2014 / MOTO G 3E GENERATION / MOTO X / MOTO X 2EME GENERATION / MOTO Z2 PLAY / NEXUS 6 / PRO / PRO + / Q11 / RAMBLER / RAZR HD XT925 / RAZR I XT890 / RAZR V3 / RAZR V3I / RAZR XT910 / SPICE XT300 / V1100 / VE66 / W160/W156 / W181 / W388 / W396 / WILDER EX130 / WX295 / WX404 / XOOM / XT3 XT502 / XT5 XT502

**NINTENDO**

SWITCH

**NOKIA**

BOOKLET / 1 2018 / 100 / 101 / 108 / 112 / 113 / 1202 / 2 / 208 / 2220 SLIDE / 2310 / 2680 SLIDE / 2710 NAVIGATOR / 3 / 3.1 / 301 / 3310 2017 / 5 / 5.1 / 5.1 PLUS / 500 / 5230 XPRESS MUSIC / 5235 CWM / 5250 / 6 / 6 2018 / 6.1 / 603 / 6133B / 6267 / 6288 / 6350 / 6650 FOLD / 6700 CLASSIC / 6700 SLIDE / 7 PLUS / 7.1 / 700 ZETA / 701 / 7210 SUPERNOVA / 7230 / 808 PUREVIEW / 9 PUREVIEW / ASHA 200 / ASHA 201 / ASHA 202 / ASHA 203 / ASHA 300 / ASHA 302 / ASHA 303 / ASHA 305 / ASHA 306 / ASHA 308 / ASHA 311 / ASHA 501 / ASHA 503 / C1-00 / C1-01 / C1-02 / C2-00 / C2-01 / C2-02 / C2-03 / C2-05 / C2-06 / C3 / C3-01 TOUCH AND TYPE / C5 / C5-03 / C5-05 / C5-06 / C6 / C6-01 / C7-00 / E5 / E6-00 / E7 / LUMIA 1020 / LUMIA 1320 / LUMIA 1520 / LUMIA 510 / LUMIA 520 / LUMIA 532 / LUMIA 610 / LUMIA 620 / LUMIA 625 / LUMIA 630 / LUMIA 710 / LUMIA 720 / LUMIA 730 / LUMIA 735 / LUMIA 800 / LUMIA 820 / LUMIA 900 / LUMIA 920 / LUMIA 925 / LUMIA 930 / MURAL 6750 / N1800 / N2730 / N7020 / N71 / N77 / N8 / N800 / N81 8GB / N810 WI-MAX / N9 / ORO / SURGE 6790 / X / X1-00 / X1-01 / X2 / X2-01 / X2-02 / X2-05 / X3-02 TOUCH AND TYPE / X5-01 / X7-00 / XL

**ONEPLUS**

**OPPO**

A3 / A3S / A5 (2020) / A7 / A72 / A9 (2020) / AX7 / FIND X / FIND X2 LITE / FIND X2 NEO / FIND X2 PRO / R15 PRO / RENO / RENO 10X ZOOM / RENO 2 / RENO 2F / RENO 2Z / RENO Z / RX17 NEO

**ORANGE**

DIVE 71 / HI 4G / HOLLYWOOD / NEVA 80 / NEVA JET / NEVA PLAY / NEVA ZEN / NURA / RISE 51 / RISE 52 / RONO / TABBEE / TECNO N9

**PANASONIC**

ELUGA / ELUGA POWER

**SAGEM**

MY X1-2 / MY X3-2 / MY X5-2 / MY X6-2 / my501Ci / SG343i / SG346i

**SAMSUNG**

N130 / N310 / NC10 / B2100 / B2710 / B7722 / C3200 / C3350 / C3520 / C3530 / C3595 / C3750 / CHAT 222 E2220 / CHAT 335 S3350 / CHAT 350 C3500 / CHAT 357 S3570 / CORBY II S3850 / E1050 / E1150 / E1170 / E1190 / E1252 / E1270 / E2100 / E2152 / E2230 / E2330 / E2350B / E2370 / E2530 / GALAXY 550 I5500 / GALAXY 551 I5510 / GALAXY A10 A105 / GALAXY A20e A202 / GALAXY A21S A217 / GALAXY A3 A300 / GALAXY A3 A310 2016 / GALAXY A3 A320 2017 / GALAXY A31 A315 / GALAXY A40 A405 / GALAXY A41 A415 / GALAXY A5 A500 / GALAXY A5 A510 2016 / GALAXY A5 A520 2017 / GALAXY A50 A505 / GALAXY A51 5G A516 / GALAXY A51 A515 / GALAXY A6 A600 2018 / GALAXY A6+ A605 2018 / GALAXY A7 A700 / GALAXY A7 A710 2016 / GALAXY A7 A750 2018 / GALAXY A70 A705 / GALAXY A71 A715 / GALAXY A8 A530 2018 / GALAXY A8+ A730 2018 / GALAXY A80 A805 / GALAXY A9 A920 2018 / GALAXY ACE 2 I8160 / GALAXY ACE 3 S7270 / GALAXY ACE 4 4G G357 / GALAXY ACE PLUS S7500 / GALAXY ACE S5830 / GALAXY ACE S5830 ZV / GALAXY ALPHA G850 / GALAXY BEAM I8530 / GALAXY CAMERA GC100 / GALAXY CORE 4G G386 / GALAXY CORE I8260 / GALAXY CORE PLUS G3500 / GALAXY CORE PRIME G360 / GALAXY CORE PRIME VE / GALAXY EXPRESS 2 / GALAXY EXPRESS I8730 / GALAXY FAME LITE S6790 / GALAXY FAME S6810 / GALAXY FIT S5670 / GALAXY FOLD / GALAXY GIO S5660 / GALAXY GRAND 2 G7100 / GALAXY GRAND I9082 / GALAXY GRAND NEO I9060 / GALAXY GRAND PRIME G530 / GALAXY i7500 / GALAXY J1 J100 / GALAXY J1 J120 2016 / GALAXY J2 PRO J250 2018 / GALAXY J3 J320 2016 / GALAXY J3 J330 2017 / GALAXY J4 CORE / GALAXY J4+ J415 / GALAXY J5 J500 / GALAXY J5 J510 2016 / GALAXY J5 J530 2017 / GALAXY J6 J600 / GALAXY J6+ J610 / GALAXY J7 J710 2016 / GALAXY J7 J730 2017 / GALAXY K ZOOM C115 / GALAXY M PRO B7800 / GALAXY MEGA 5.8 I9150 / GALAXY MEGA I9200 / GALAXY MINI 2 S6500 / GALAXY MINI S5570 / GALAXY NAOS I5801 / GALAXY NEXUS I9250 / GALAXY NOTE 10 + N975 / GALAXY NOTE 10 N970 / GALAXY NOTE 10.1 2014 P600 / GALAXY NOTE 10.1 N8000 / GALAXY NOTE 2 N7100 / GALAXY NOTE 20 5G / GALAXY NOTE 20 ULTRA / GALAXY NOTE 3 LITE N7505 / GALAXY NOTE 3 N9000 / GALAXY NOTE 4 N910 / GALAXY NOTE 8.0 N5100 / GALAXY NOTE EDGE N915 / GALAXY NOTE N7000 / GALAXY NOTE PRO 12.2 P9000 / GALAXY NOTE10 LITE / GALAXY NOTE8 N950 / GALAXY NOTE9 N960 / GALAXY POCKET 2 G110 / GALAXY POCKET NEO S5310 / GALAXY POCKET PLUS S5301 / GALAXY POCKET S5300 / GALAXY POP PLUS S5570i / GALAXY PRO B7510 / GALAXY R I9103 / GALAXY S 10 + G975 / GALAXY S 10 5G G977 / GALAXY S 10 e G970 / GALAXY S 10 G973 / GALAXY S 2 I9100 / GALAXY S 2 I9100 NFC / GALAXY S 2 LTE I9210 / GALAXY S 2 PLUS I9105 / GALAXY S 20 + G985 / GALAXY S 20 G980 / GALAXY S 20 ULTRA G988 / GALAXY S 3 4G I9305 / GALAXY S 3 I9300 / GALAXY S 3 MINI I8190 / GALAXY S 4 ACTIVE I9295 / GALAXY S 4 I9500 / GALAXY S 4 MINI I9190 / GALAXY S 4 ZOOM / GALAXY S 5 G900 / GALAXY S 5 MINI G800 / GALAXY S 6 EDGE G925 / GALAXY S 6 EDGE PLUS G928 / GALAXY S 6 G920 / GALAXY S 7 EDGE G935 / GALAXY S 7 G930 / GALAXY S 8 + G955 / GALAXY S 8 G950 / GALAXY S 9 + G965 / GALAXY S 9 G960 / GALAXY S ADVANCE I9070 / GALAXY S I9000 / GALAXY S PLUS I9001 / GALAXY S SCL I9003 / GALAXY TAB 10.1 2016 T850 / GALAXY TAB 10.1 P7100 / GALAXY TAB 2 10.1 P5110 / GALAXY TAB 2 7.0 P3110 / GALAXY TAB 3 10.1 P5210 / GALAXY TAB 3 7.0 T210 / GALAXY TAB 3 8.0 T310 / GALAXY TAB 3 LITE 7.0 T110 / GALAXY TAB 4 10.1 T530 / GALAXY TAB 4 7.0 T230 / GALAXY TAB 7.7 P6800 / GALAXY TAB 8.9 / GALAXY TAB A 10.1 (2019) / GALAXY TAB A 10.1 T580 (2016) / GALAXY TAB A 10.5 / GALAXY TAB A 7 T280 (2016) / GALAXY TAB A 9.7 SM-T550 / GALAXY TAB ACTIVE PRO / Galaxy Tab E / GALAXY TAB P1000 / GALAXY TAB PRO 10.1 T520 / GALAXY TAB PRO 8.4 T320 / GALAXY TAB S 10.5 T800 / GALAXY TAB S 8.4 T700 / GALAXY TAB S2 8.0 T710 / GALAXY TAB S2 9.7 T810 / GALAXY TAB S3 9.7 T825 / GALAXY TAB S4 10.5 T830 / GALAXY TAB S5E / GALAXY TABPRO S W700 / GALAXY TEOS I5800 / GALAXY TREND 2 LITE G318 / GALAXY TREND LITE S7390 / GALAXY TREND PLUS S7580 / GALAXY TREND S7560 / GALAXY W I8150 / GALAXY XCOVER 2 S7710 / GALAXY XCOVER 3 G388 / GALAXY XCOVER 4 / GALAXY XCOVER PRO / GALAXY XCOVER S5690 / GALAXY Y PRO B5510 / GALAXY Y S5360 / GALAXY YOUNG 2 G130 / GALAXY YOUNG S6310 / GALAXY Z FLIP / GIORGIO ARMANI B7620 / GOOGLE NEXUS 10 P8110 / GRAVITY 2 T469 / GRAVITY 3 T479 / GRAVITY T T669 / M2520 / MISS PLAYER S7070 / NEXUS S I9023 / OMNIA 7 I8700 / OMNIA M S7530 / OMNIA PRO 4 B7350 / OMNIA PRO 5 B6520 / OMNIA W I8350 / PLAYER ADDICT I900 / PLAYER CITY S5260 / PLAYER F490 / PLAYER FIVE S5560 / PLAYER HD I8910 / PLAYER LIGHT C3510 / PLAYER MINI 2 C3310 / PLAYER MINI C3300 / PLAYER ONE S5230 / PLAYER STAR 2 S5620 / PLAYER STAR S5600 / PLAYER STYLE F480 / PLAYER ULTRA S8300 / REX 70 S3800 / S5610 / S7200 / SGH-C300 / SGH-D500 / SGH-D520 / SGH-E250 / SGH-E900 / SGH-S400i / SGH-S401i / SGH-S500i / SGH-S501i / SGH-Z650i / SHARK S5350 / SMILEY T359 / STAR 3 S5220 / WAVE 3 S8600 / WAVE 533 S5330 / WAVE 575 S5750 / WAVE 578 S5780 / WAVE 723 S7230 / WAVE II S8530 / WAVE M S7250 / WAVE ONE S5250 / WAVE S8500 / WAVE Y S5380

**SFR**

S BY SFR 101 / S BY SFR 102 / S BY SFR 116 / S BY SFR 118 / S BY SFR 1180 / S BY SFR 124 / S BY SFR 501 / S BY SFR C1 / SFR 115 / SFR 151 / SFR 242 / SFR 251 / X990 / SFR 261 / SFR S BY SFR 117 / SFR S BY SFR 123 / STARACTIVE / STARACTIVE 2 / STARADDICT / STARADDICT 2 / STARADDICT 2 PLUS / STARADDICT 3 / STARADDICT 4 / STARADDICT 5 / STARADDICT 6 / STARNAUTE / STARNAUTE 2 / STARNAUTE 3 / STARSHINE / STARSHINE 2 / STARSHINE 3 / STARSHINE 4 / STARSHINE 5 / STARTEXT / STARTEXT 2 / STARTRAIL / STARTRAIL 2 / STARTRAIL 3 / STARTRAIL 4 / STARTRAIL 5 / STARTRAIL 6 / STARTRAIL 6 PLUS / STARTRAIL 7 / STARTRAIL 8 / STARTRAIL 9 / STARXTREM / STARXTREM 4 / STARXTREM 5 / STARXTREM 6 / STARXTREM II / TEXT EDITION 153 / WINDOWS PHONE INTERNET 7

**SONY**

ASPEN / CEDAR / ELM / HAZEL / HUAWEI P40 LITE 5G / JALOU / K750 / K770 / K800 / LIVE WITH WALKMAN / MIX WALKMAN / NAITE / S500 / SPIRO / TABLET S / TXT / TXT PRO / VIVAZ PRO / VIVAZ U5 / W8 / W810 / XIAOMI REDMI NOTE 9 / XPERIA 1 / XPERIA 10 / XPERIA 10 PLUS / XPERIA 5 / XPERIA ACTIVE / XPERIA ARC / XPERIA ARC S / XPERIA C3 / XPERIA C4 / XPERIA C5 ULTRA / XPERIA E / XPERIA E1 / XPERIA E3 / XPERIA E4 / XPERIA E4G / XPERIA E5 / XPERIA GO / XPERIA ION / XPERIA J / XPERIA KYNO / XPERIA KYNO V / XPERIA L1 / XPERIA L2 / XPERIA L3 / XPERIA M / XPERIA M2 / XPERIA M4 AQUA / XPERIA M5 / XPERIA MINI / XPERIA MINI PRO / XPERIA MIRO / XPERIA P / XPERIA PLAY / XPERIA PRO / XPERIA PURENESS / XPERIA RAY / XPERIA S / XPERIA SOLA / XPERIA SP / XPERIA T / XPERIA T2 ULTRA / XPERIA T3 / XPERIA TABLET Z / XPERIA TIPO / XPERIA U / XPERIA X / XPERIA X COMPACT / XPERIA X1 / XPERIA X10 / XPERIA X10 MINI / XPERIA X10 MINI PRO / XPERIA X8 / XPERIA XA / XPERIA XA ULTRA / XPERIA XA1 / XPERIA XA1 ULTRA / XPERIA XA2 / XPERIA XA2 PLUS / XPERIA XA2 ULTRA / XPERIA XZ / XPERIA XZ PREMIUM / XPERIA XZ1 / XPERIA XZ1 COMPACT / XPERIA XZ2 / XPERIA XZ2 COMPACT / XPERIA XZ3 / XPERIA Z / XPERIA Z ULTRA / XPERIA Z1 / XPERIA Z1 COMPACT / XPERIA Z2 / XPERIA Z3 / XPERIA Z3 COMPACT / XPERIA Z3+ / XPERIA Z5 / XPERIA Z5 COMPACT / XPERIA Z5 PREMIUM / XPERIA ZL / YARI / YENDO W150 / Z610 / ZYLO

**SOSH**

LE MOBILE SOSH / SOSHPHONE MINI

**TOSHIBA**

FOLIO 100 / REGZA AT300

**WIKO**

BARRY / BIRDY / BLOOM / BLOOM 2 / CINK / CINK FIVE / CINK KING / CINK PEAX / CINK PEAX 2 / CINK PLUS / CINK SLIM / DARKFULL / DARKMOON / DARKNIGHT / DARKSIDE / DEA / DUELLE / FEVER / FREDDY / GETAWAY / GOA / HARRY / HARRY 2 / HIGHWAY / HIGHWAY PURE 4G / HIGHWAY SIGNS / HIGHWAY STAR 4G / IGGY / JERRY / JERRY 2 / JERRY 3 / JIMMY / KITE / LENNY / LENNY 2 / LENNY 3 / LENNY 4 / LENNY 5 / OZZY / PULP 4G / PULP FAB / RAINBOW / RAINBOW 4G / RAINBOW JAM 3G / RAINBOW JAM 4G / RAINBOW LITE 4G / RAINBOW UP 4G / RIDGE 4G / RIDGE FAB 4G / ROBBY / SELFY 4G / SLIDE / SOAP / STAIRWAY / SUBLIM / SUNNY / SUNNY 2 / SUNNY 2 PLUS / SUNNY 3 / SUNSET / SUNSET 2 / TOMMY / TOMMY 2 / TOMMY 2 PLUS / TOMMY 3 / U FEEL / U FEEL LITE / U FEEL PRIME / U PULSE / U PULSE LITE / VENIA / VIEW / VIEW 3 / VIEW 3 LITE / VIEW 4 / VIEW 4 LITE / VIEW GO / VIEW LITE / VIEW MAX / VIEW PRIME / VIEW XL / VIEW2 / WAX / WIM / WIM LITE / Y50 / Y60 / Y80

#### **XIAOMI**

BLACK SHARK HELO / MI 10 5G / MI 10 PRO 5G / MI 8 / MI 8 LITE / MI 9 / MI 9 LITE / MI 9 SE / MI 9T / MI 9T PRO / MI A1 / MI A2 / MI A3 / MI MIX 2 / MI MIX 2S / MI MIX 3 / MI NOTE 10 / MI NOTE 10 PRO / POCOPHONE F1 / REDMI 5 / REDMI 6 / REDMI 6A / REDMI 7 / REDMI 7A / REDMI 8 / REDMI 8A / REDMI GO / REDMI NOTE 5 / REDMI NOTE 5 AL DUAL CAMERA / REDMI NOTE 7 / REDMI NOTE 8 / REDMI NOTE 8 PRO / REDMI NOTE 8T / REDMI NOTE 9 / REDMI NOTE 9 PRO / REDMI NOTE 9S / REDMI S2

#### **ZTE**

BLADE / BLADE A452 / BLADE Q / BLADE S / BLADE V7 LITE / ERA / FTV / GRAND MEMO V9815 / GRAND X IN / MIMOSA X / N290 / ORBIT / R236 / R237 / R620 / S202 / S203 / S213 / SKATE / SKATE MESSAGE / STYLE Q / TANIA / X991