



PNY

Carte mémoire Micro SD PNY 128 Go

Augmentez la mémoire de votre smartphone et profitez de plus de contenus mobiles. Pour un usage personnel comme professionnel, les cartes microSD Performance Plus vous permettent de stocker et de partager plus de contenus multimédias, courriels, documents ou présentations faciles d'accès lors de vos déplacements.

GENCODE :
0751492625690



REF. :
PNYMICROSDPP128GO

Caractéristiques

Carte mémoire Micro SD class 10 50MB/s Performance Plus PNY 128 Go :

- Classe 10
- Vitesse de lecture : 50 MB/s
- Vitesse d'écriture : 10MB/s
- Adaptateur SD inclus

Atout

Rapide
Haute performance

Couleur	Noir
Contenu du pack	1 carte mémoire micro SD PNY + 1 adaptateur SD

MOBILES COMPATIBLES

ACER

BE TOUCH E100 / BE TOUCH E110 / BE TOUCH E120 / BE TOUCH E130 / BE TOUCH E140 / BE TOUCH E200 / BE TOUCH E210 / BE TOUCH E400 / CLOUDMOBILE S500 / ICONIA SMART / ICONIA TAB A100 / ICONIA TAB A500 / ICONIA TAB A501 / ICONIA TAB B1-A71 / LIBERTY TAB / LIQUID / LIQUID E1 / LIQUID E2 / LIQUID EXPRESS E320 / LIQUID GALLANT E350 / LIQUID GLOW / LIQUID METAL / LIQUID MINI / LIQUID S100 / LIQUID STREAM / LIQUID Z2 / LIQUID Z200 / LIQUID Z3 / NEW TOUCH S200

ALCATEL

1 (5033) / 1X (5059) / 1X 2019 (5008) / 3 (5052) / 3C (5026) / 3L (5034) / 3V (5099) / 3X (5058) / 5 (5086) / 5V (5060) / A3 / A3 XL / A5 LED / IDOL 3 (4.7) / IDOL 3 (5.5) / IDOL 4 / ONE TOUCH GOPLAY / ONE TOUCH IDOL / ONE TOUCH IDOL 2S / ONE TOUCH IDOL MINI / ONE TOUCH IDOL S / ONE TOUCH M'POP / ONE TOUCH PIXI 3 4 POUCES / ONE TOUCH POP S3 / ONE TOUCH STAR / ONE TOUCH X POP / OT-305 / OT-306 / OT-355 / OT-505 / OT-506 / OT-506D / OT-655 / OT-803 / OT-808 / OT-838 / OT-890 / OT-990 / OT-995 / OT-996 / OT-997 / PIXI 3 3.5 / PIXI 3 4 / PIXI 3 4.5 / PIXI 4 3G / PIXI 4 5 / POP 2 4.5 / POP 3 5.0 / POP 4 / POP C1 / POP C5 / POP C7 / POP C9 / POP S7 / U5 / 1S (5024) / 3X 2019 (5048)

APPLE

IPAD PRO 10.5

ARCHOS

40 TITANIUM / 45 HELIUM 4G / SAPHIR 50X

ASUS

NUVIFONE A50 / NUVIFONE G60 / NUVIFONE M10 / P835 / PADFONE / TF600 / TRANSFORMER PAD 300 / TRANSFORMER PAD INFINITY 700 / TRANSFORMER PRIME TF700T / ZENFONE 2 ZE500 CL / ZENFONE 2 ZE550 ML / ZENFONE 3 MAX ZC520TL / ZENFONE 4 MAX PLUS ZC554KL / ZENFONE 4 MAX ZC520KL / ZENFONE LIVE ZB501KL / ZENFONE MAX PRO M1 ZB601KL

BLACKBERRY

9720 / BOLD 9000 / BOLD 9700 / BOLD 9780 / BOLD 9790 / BOLD TOUCH 9900 / BOLD TOUCH 9930 / CLASSIC / CURVE 3G 9300 / CURVE 8520 / CURVE 9320 / CURVE 9360 / CURVE 9380 / KEY2 / PASSPORT / PEARL 3G 9100 / PEARL 3G 9105 / PEARL 8100 / PRIV / Q10 / Q5 / TORCH 9800 / TORCH 9810 / TORCH 9860 / Z10

BOUYGUES TELECOM

BC 211 / BC311 / BS351 / BS401 / BS402 / BS403 / BS451 / BS471 / ULTYM 4 / ULTYM 4 MAXI / ULTYM 5 / ULTYM 5.2

CROSSCALL

ACTION X3 / CORE X3 / SPIDER X1 / TREKKER X3 / TREKKER M 1 / TREKKER X4 / CORE M4

DELL

AERO / MINI 3IX / STREAK / THUNDER / VENUE PRO / XCD28 / XCD35

DORO

5516 / 6050 / 6530 / 7070 / 8020X / 8031 / 8040 / 8042 / 825 / LIBERTO 820 MINI / LIBERTO 822 / PHONEEASY 612 / SECURE 580/580 IUP

ECHO

BUZZ / DUNE / FEELING / FLOW / FUSION / HALO / HORIZON LITE / HORIZON M / JAVA / LOLLY / LOOK / MOON / NOTE / PUSH / SMART4G / STAR / STELLAR / STELLAR 4G / SURF / VOLT / WIZ

FUJITSU

STYLISTIC S01

HONOR

HONOR 10 / HONOR 10 LITE / HONOR 5C / HONOR 5X / HONOR 6 PLUS / HONOR 6A / HONOR 6C / HONOR 6C PRO / HONOR 6X / HONOR 7 / HONOR 7A / HONOR 7C / HONOR 7S / HONOR 7X / HONOR 8 / HONOR 8A / HONOR 8X / HONOR 9 / HONOR 9 LITE / HONOR PLAY / VIEW 10 / HONOR 20 LITE / HONOR 8S / HONOR 9X

HTC

10 / ARIA / CHACHA / DESIRE 10 LIFESTYLE / DESIRE 12 / DESIRE 310 / DESIRE 510 / DESIRE 530 / DESIRE 610 / DESIRE 620 / DESIRE 626 / DESIRE 650 / DESIRE 816 / DESIRE 820 / DESIRE 825 / DESIRE C / DESIRE EYE / DESIRE HD / DESIRE S / DESIRE X / DESIRE Z / EVO 3D / EXPLORER / FLYER / GOOGLE NEXUS ONE / GRATIA / HD MINI / HD2 / INCREDIBLE S / MAGIC / ONE A9 / ONE M8 / ONE M9 / ONE MINI 2 / ONE SV / ONE V / One X9 / RHYME / SALSA / SENSATION / SMART / TOUCH HD MINI / TOUCH MAX 4G / TOUCH2 / U PLAY / U11 / WILDFIRE S / WINDOWS PHONE 8S

HUAWEI

ASCEND D QUAD / ASCEND D QUAD XL / ASCEND D1 / ASCEND G300 / ASCEND G6 / ASCEND G6 4G / ASCEND G620S / ASCEND G740 / ASCEND G750 / ASCEND MATE 7 / ASCEND P1 / ASCEND P1 S / ASCEND P7 / ASCEND Y330 / ASCEND Y530 / ASCEND Y550 / G330 / G6150 / IDEOS S7 / IDEOS U8150 / IDEOS U8300 / IDEOS U8500 / IDEOS X5 U8800 / IDEOS X6 U9000 / MATE 10 LITE / MATE 10 PRO / MATE 20 LITE / MATE 8 / MATE 9 / MATE S / MEDIAPAD T1 10 / MEDIAPAD T3 8 / NOVA / NOVA 4 / P SMART / P SMART 2019 / P10 / P10 Lite / P10 PLUS / P20 / P20 LITE / P20 PRO / P8 / P8 LITE 2016 / P8 LITE 2017 / P9 / P9 LITE / P9 PLUS / U8350 / Y3 / Y5 / Y5 2018 / Y5 II / Y6 / Y6 2017 / Y6 2018 / Y6 2019 / Y6 II / Y6 PRO 2017 / Y635 / Y7 2018 / Y7 2019 / P SMART 2020 / P SMART PRO 2019 / P SMART Z / P20 LITE 2019 / P30 LITE / Y5 2019 / Y5P / Y6P / Y6S (2019)

KAZAM

THUNDER2 5.0 / TROOPER2 5.0

LENOVO

C2 / K5 / MOTO Z

LG

A133 / A155 / A200 / A250 / A290 / A310 / BELLO 2 / C105 / C310 / C320 / C330 / C360 / C710 / COOKIE 3G T320 / COOKIE FRESH GS290 / COOKIE LITE T300 / COOKIE LIVE KM570 / COOKIE PLUS GS500 / COOKIE STYLE T310 / F60 / FATHOM VS750 / G FLEX 2 / G PRO 2 / G3 / G3 S / G4 / G4 C / G4 STYLUS / G5 / G6 / GB110 / GB115 / GB210 / GB230 / GD330 / GM205 / GM310 / GM730 / GS200 / GT350 / GT405 / GT540 / GW910 / GX200 / GX300 / GX500 / K10 / K11 / K4 / K7 / K8 / K9 (Candy) / KP270 / KS365 / KS660 / KT610 / KT770 / KU250 / KU385 / L FINO / L65 / L70 / L80 / L90 / LEON 4G LTE / LOLLIPOP GD580 / MINI GD880 / OPTIMUS 2X P990 / OPTIMUS 3D MAX P720 / OPTIMUS 3D P920 / OPTIMUS 4X HD P880 / OPTIMUS BLACK P970 / OPTIMUS CHAT C550 / OPTIMUS CHIC E720 / OPTIMUS F5 P875 / OPTIMUS F6 D505 / OPTIMUS G / OPTIMUS L3 E400 / OPTIMUS L3 II E430 / OPTIMUS L4 II / OPTIMUS L5 E610 / OPTIMUS L5 II E460 / OPTIMUS L7 II P710 / OPTIMUS L7 P700 / OPTIMUS L9 P760 / OPTIMUS ME P350 / OPTIMUS NET / OPTIMUS ONE P500 / OPTIMUS PAD / OPTIMUS PRO C660 / OPTIMUS SOL E730 / OPTIMUS VU / P520 / POPCORN GU280 / PRADA PHONE 3.0 / PURE GD550 / Q STYLUS + / Q6 / SWIFT GT540 / T315 / T385 / TOWN C300 / VIEWTY SMILE GT400 / VIEWTY SNAP GM360 / K40 / K40S / K50S / Q60

LOGICOM

E350 / E400 / E500 / S450 / S504

MICROSOFT

LUMIA 435 / LUMIA 530 / LUMIA 535 / LUMIA 540 / LUMIA 550 / LUMIA 635 / LUMIA 640 / LUMIA 640 XL / LUMIA 650 / LUMIA 830 / LUMIA 950 / LUMIA 950 XL / SURFACE

MOTOROLA

A3000 / ATRIX 3G / ATRIX 4G MB860 / BALI / BRAVO MB520 / CHARM / DEFY + / DEFY MINI XT320 / DEXT / DROID PRO XT610 / DROID X / EM28/EM330 / EM30 / EM35 / ES400 / EX115 / FIRE XT316 / FLIPOUT MB511 / FLIPSIDE MB508 / G6 / GLAM XT800 / GLEAM / GLEAM PLUS / KARMA QA1 / MILESTONE / MILESTONE 2 / MILESTONE XT720 / MOTO C PLUS / MOTO E 4G / MOTO E2 / MOTO E4 PLUS / MOTO G 2014 / MOTO G 3E / GENERATION / MOTO Z2 PLAY / PRO / PRO + / Q11 / RAMBLER / RAZR HD XT925 / RAZR I XT890 / RAZR V3I / RAZR XT910 / SPICE XT300 / VE66 / W388 / W396 / WILDER EX130 / WX295 / WX404 / XOOM / XT3 XT502 / XT5 XT502

NINTENDO

SWITCH

NOKIA

1 2018 / 101 / 108 / 112 / 113 / 2 / 208 / 2710 NAVIGATOR / 3 / 3.1 / 301 / 3310 2017 / 5 / 5.1 / 5.1 PLUS / 500 / 5235 CWM / 5250 / 6 / 6 2018 / 6.1 / 603 / 6133B / 6267 / 6350 / 6650 FOLD / 6700 CLASSIC / 6700 SLIDE / 7 PLUS / 7.1 / 700 ZETA / 701 / 7210 SUPERNOVA / 7230 / 808 / PUREVIEW / ASHA 200 / ASHA 201 / ASHA 202 / ASHA 203 / ASHA 300 / ASHA 302 / ASHA 303 / ASHA 305 / ASHA 306 / ASHA 308 / ASHA 311 / ASHA 501 / ASHA 503 / C1-01 / C1-02 / C2-00 / C2-01 / C2-02 / C2-03 / C2-05 / C2-06 / C3 / C3-01 TOUCH AND TYPE / C5 / C5-03 / C5-05 / C5-06 / C6 / C6-01 / C7-00 / E5 / E6-00 / E7 / LUMIA 1320 / LUMIA 1520 / LUMIA 520 / LUMIA 532 / LUMIA 620 / LUMIA 625 / LUMIA 630 / LUMIA 720 / LUMIA 730 / LUMIA 735 / LUMIA 820 / MURAL 6750 / N2730 / N7020 / N77 / N8 / N800 / N810 WI-MAX / ORO / SURGE 6790 / X / X1-00 / X1-01 / X2 / X2-01 / X2-02 / X2-05 / X3-02 TOUCH AND TYPE / X5-01 / X7-00 / XL

OPPO

A3 / A3S / A7 / AX7 / FIND X / R15 PRO / RX17 NEO / A5 (2020) / A72 / A9 (2020) / RENO 10X ZOOM / RENO 2 / RENO 2F / RENO 2Z

ORANGE

DIVE 71 / HI 4G / HOLLYWOOD / NEVA 80 / NURA / RISE 51 / RONO / TECNO N9 / NEVA JET / NEVA PLAY / NEVA ZEN

SAGEM

MY X6-2 / my501Ci

SAMSUNG

B2100 / B2710 / B7722 / C3200 / C3350 / C3520 / C3530 / C3595 / C3750 / CHAT 222 E2220 / CHAT 335 S3350 / CHAT 350 C3500 / CHAT 357 S3570 / CORBY II S3850 / E2152 / E2230 / E2330 / E2350B / E2370 / E2530 / GALAXY 550 I5500 / GALAXY 551 I5510 / GALAXY A3 A300 / GALAXY A3 A310 2016 / GALAXY A3 A320 2017 / GALAXY A40 A405 / GALAXY A5 A500 / GALAXY A5 A510 2016 / GALAXY A5 A520 2017 / GALAXY A50 A505 / GALAXY A6 A600 2018 / GALAXY A6+ A605 2018 / GALAXY A7 A700 / GALAXY A7 A710 2016 / GALAXY A7 A750 2018 / GALAXY A70 A705 / GALAXY A8 A530 2018 / GALAXY A8+ A730 2018 / GALAXY A9 A920 2018 / GALAXY ACE 2 I8160 / GALAXY ACE 3 S7270 / GALAXY ACE 4 4G G357 / GALAXY ACE PLUS S7500 / GALAXY ACE S5830 / GALAXY ACE S5830 ZV / GALAXY BEAM I8530 / GALAXY CAMERA GC100 / GALAXY CORE 4G G386 / GALAXY CORE I8260 / GALAXY CORE PLUS G3500 / GALAXY CORE PRIME G360 / GALAXY CORE PRIME VE / GALAXY EXPRESS 2 / GALAXY EXPRESS I8730 / GALAXY FAME LITE S6790 / GALAXY FAME S6810 / GALAXY FIT S5670 / GALAXY GIO S5660 / GALAXY GRAND 2 G7100 / GALAXY GRAND I9082 / GALAXY GRAND NEO I9060 / GALAXY GRAND PRIME G530 / GALAXY i7500 / GALAXY J1 J100 / GALAXY J1 J120 2016 / GALAXY J2 PRO J250 2018 / GALAXY J3 J320 2016 / GALAXY J3 J330 2017 / GALAXY J4 CORE / GALAXY J4+ J415 / GALAXY J5 J500 / GALAXY J5 J510 2016 / GALAXY J5 J530 2017 / GALAXY J6 J600 / GALAXY J6+ J610 / GALAXY J7 J710 2016 / GALAXY J7 J730 2017 / GALAXY K ZOOM C115 / GALAXY M PRO B7800 / GALAXY MEGA 5.8 I9150 / GALAXY MEGA I9200 / GALAXY MINI 2 S6500 / GALAXY MINI S5570 / GALAXY NAOS I5801 / GALAXY NOTE 10.1 2014 P600 / GALAXY NOTE 10.1 N8000 / GALAXY NOTE 2 N7100 / GALAXY NOTE 3 LITE N7505 / GALAXY NOTE 3 N9000 / GALAXY NOTE 4 N910 / GALAXY NOTE 8.0 N5100 / GALAXY NOTE EDGE N915 / GALAXY NOTE N7000 / GALAXY NOTE PRO 12.2 P9000 / GALAXY NOTE8 N950 / GALAXY NOTE9 N960 / GALAXY POCKET 2 G110 / GALAXY POCKET NEO S5310 / GALAXY POCKET PLUS S5301 / GALAXY POCKET S5300 / GALAXY POP PLUS S5570i / GALAXY PRO B7510 / GALAXY R I9103 / GALAXY S 10 + G975 / GALAXY S 10 e G970 / GALAXY S 10 G973 / GALAXY S 2 I9100 / GALAXY S 2 I9100 NFC / GALAXY S 2 LTE I9210 / GALAXY S 2 PLUS I9105 / GALAXY S 3 4G I9305 / GALAXY S 3 I9300 / GALAXY S 3 MINI I8190 / GALAXY S 4 ACTIVE I9295 / GALAXY S 4 I9500 / GALAXY S 4 MINI I9190 / GALAXY S 4 ZOOM / GALAXY S 5 G900 / GALAXY S 5 MINI G800 / GALAXY S 7 EDGE G935 / GALAXY S 7 G930 / GALAXY S 8 + G955 / GALAXY S 8 G950 / GALAXY S 9 + G965 / GALAXY S 9 G960 / GALAXY S ADVANCE I9070 / GALAXY S I9000 / GALAXY S PLUS I9001 / GALAXY S SCL I9003 / GALAXY TAB 10.1 2016 T850 / GALAXY TAB 10.1 P7100 / GALAXY TAB 2 10.1 P5110 / GALAXY TAB 2 7.0 P3110 / GALAXY TAB 3 10.1 P5210 / GALAXY TAB 3 7.0 T210 / GALAXY TAB 3 8.0 T310 / GALAXY TAB 3 LITE 7.0 T110 / GALAXY TAB 4 10.1 T530 / GALAXY TAB 4 7.0 T230 / GALAXY TAB 7.7 P6800 / GALAXY TAB 8.9 / GALAXY TAB A 10.1 T580 (2016) / GALAXY TAB A 7 T280 (2016) / GALAXY TAB A 9.7 SM-T550 / Galaxy Tab E / GALAXY TAB P1000 / GALAXY TAB PRO 10.1 T520 / GALAXY TAB PRO 8.4 T320 / GALAXY TAB S 10.5 T800 / GALAXY TAB S 8.4 T700 / GALAXY TAB S2 8.0 T710 / GALAXY TAB S2 9.7 T810 / GALAXY TAB S3 9.7 T825 / GALAXY TAB S4 10.5 T830 / GALAXY TAB S5E / GALAXY TEOS I5800 / GALAXY TREND 2 LITE G318 / GALAXY TREND LITE S7390 / GALAXY TREND PLUS S7580 / GALAXY TREND S7560 / GALAXY W I8150 / GALAXY XCOVER 2 S7710 / GALAXY XCOVER 3 G388 / GALAXY XCOVER 4 / GALAXY XCOVER S5690 / GALAXY Y PRO B5510 / GALAXY Y S5360 / GALAXY YOUNG 2 G130 / GALAXY YOUNG S6310 / GIORGIO ARMANI B7620 / GRAVITY 2 T469 / GRAVITY 3 T479 / GRAVITY T T669 / M2520 / MISS PLAYER S7070 / OMNIA PRO 4 B7350 / OMNIA PRO 5 B6520 / PLAYER ADDICT I900 / PLAYER CITY S5260 / PLAYER F490 / PLAYER FIVE S5560 / PLAYER HD I8910 / PLAYER LIGHT C3510 / PLAYER MINI 2 C3310 / PLAYER MINI C3300 / PLAYER ONE S5230 / PLAYER STAR 2 S5620 / PLAYER STAR S5600 / PLAYER STYLE F480 / PLAYER ULTRA S8300 / REX 70 S3800 / S5610 / S7200 / SGH-E250 / SGH-E900 / SGH-Z650i / SHARK S5350 / SMILEY T359 / STAR 3 S5220 / WAVE 3 S8600 / WAVE 533 S5330 / WAVE 575 S5750 / WAVE 578 S5780 / WAVE 723 S7230 / WAVE II S8530 / WAVE M S7250 / WAVE ONE S5250 / WAVE S8500 / WAVE Y S5380 / GALAXY A10 A105 / GALAXY A20e A202 / GALAXY A21S A217 / GALAXY A41 A415 / GALAXY A51 5G A516 / GALAXY A51 A515 / GALAXY A71 A715 / GALAXY NOTE 10 + N975 / GALAXY NOTE10 LITE / GALAXY S 20 + G985 / GALAXY S 20 G980 / GALAXY S 20 ULTRA G988 / GALAXY TAB A 10.1 (2019) / GALAXY TAB A 10.5 / GALAXY TAB ACTIVE PRO / GALAXY XCOVER PRO

SFR
S BY SFR 116 / S BY SFR 118 / S BY SFR 1180 / S BY SFR 124 / S BY SFR 501 / S BY SFR C1 / SFR 115 / SFR 151 / SFR 251 / X990 / SFR 261 / SFR S BY SFR 117 / STARACTIVE / STARACTIVE 2 / STARADDICT / STARADDICT 2 / STARADDICT 2 PLUS / STARADDICT 3 / STARADDICT 4 / STARADDICT 5 / STARADDICT 6 / STARNAUTE / STARNAUTE 2 / STARNAUTE 3 / STARSHINE / STARSHINE 2 / STARSHINE 3 / STARSHINE 4 / STARSHINE 5 / STARTEXT / STARTEXT 2 / STARTRAIL / STARTRAIL 2 / STARTRAIL 3 / STARTRAIL 4 / STARTRAIL 5 / STARTRAIL 6 / STARTRAIL 6 PLUS / STARTRAIL 7 / STARTRAIL 8 / STARTRAIL 9 / STARXTREM / STARXTREM 4 / STARXTREM 5 / STARXTREM 6 / STARXTREM II / TEXT EDITION 153

SONY
ASPEN / CEDAR / ELM / HAZEL / JALOU / LIVE WITH WALKMAN / MIX WALKMAN / NAITE / SPIRO / TXT / TXT PRO / VIVAZ PRO / VIVAZ U5 / W8 / XPERIA 10 / XPERIA 10 PLUS / XPERIA ACTIVE / XPERIA ARC / XPERIA ARC S / XPERIA C3 / XPERIA C4 / XPERIA C5 ULTRA / XPERIA E / XPERIA E1 / XPERIA E3 / XPERIA E4 / XPERIA E4G / XPERIA E5 / XPERIA GO / XPERIA ION / XPERIA J / XPERIA KYNO / XPERIA KYNO V / XPERIA L1 / XPERIA L2 / XPERIA L3 / XPERIA M / XPERIA M2 / XPERIA M4 AQUA / XPERIA M5 / XPERIA MINI / XPERIA MINI PRO / XPERIA MIRO / XPERIA PLAY / XPERIA PRO / XPERIA PURENESS / XPERIA RAY / XPERIA SOLA / XPERIA SP / XPERIA T / XPERIA T2 ULTRA / XPERIA T3 / XPERIA TABLET Z / XPERIA TIPO / XPERIA X / XPERIA X COMPACT / XPERIA X1 / XPERIA X10 / XPERIA X10 MINI / XPERIA X10 MINI PRO / XPERIA X8 / XPERIA XA / XPERIA XA ULTRA / XPERIA XA1 / XPERIA XA1 ULTRA / XPERIA XA2 / XPERIA XA2 PLUS / XPERIA XA2 ULTRA / XPERIA XZ / XPERIA XZ PREMIUM / XPERIA XZ1 / XPERIA XZ1 COMPACT / XPERIA XZ2 / XPERIA XZ2 COMPACT / XPERIA XZ3 / XPERIA Z / XPERIA Z ULTRA / XPERIA Z1 / XPERIA Z1 COMPACT / XPERIA Z2 / XPERIA Z3 / XPERIA Z3 COMPACT / XPERIA Z3+ / XPERIA Z5 / XPERIA Z5 COMPACT / XPERIA ZL / YARI / YENDO W150 / ZYLO / XPERIA 1 / XPERIA 5

SOSH
LE MOBILE SOSH / SOSHPHONE MINI

WIKO
BARRY / BIRDY / BLOOM / BLOOM 2 / CINK / CINK FIVE / CINK KING / CINK PEAX / CINK PEAX 2 / CINK PLUS / CINK SLIM / DARKMOON / DARKKNIGHT / DEA / DUELLE / FEVER / FREDDY / GETAWAY / GOA / HARRY / HARRY 2 / HIGHWAY SIGNS / HIGHWAY STAR 4G / IGGY / JERRY / JERRY 2 / JERRY 3 / KITE / LENNY / LENNY 2 / LENNY 3 / LENNY 4 / LENNY 5 / OZZY / PULP 4G / PULP FAB / RAINBOW / RAINBOW 4G / RAINBOW JAM 3G / RAINBOW JAM 4G / RAINBOW LITE 4G / RAINBOW UP 4G / RIDGE 4G / RIDGE FAB 4G / ROBBY / SELFY 4G / SLIDE / SOAP / STAIRWAY / SUBLIM / SUNNY / SUNNY 2 / SUNNY 2 PLUS / SUNNY 3 / SUNSET / SUNSET 2 / TOMMY / TOMMY 2 / TOMMY 2 PLUS / TOMMY 3 / U FEEL / U FEEL LITE / U FEEL PRIME / U PULSE / U PULSE LITE / VENIA / VIEW / VIEW GO / VIEW LITE / VIEW MAX / VIEW PRIME / VIEW XL / VIEW2 / WAX / WIM / WIM LITE / VIEW 3 / VIEW 3 LITE / VIEW 4 / VIEW 4 LITE / Y50 / Y60 / Y80

XIAOMI
MI 8 / MI 8 LITE / MI A1 / MI A2 / MI MIX 2 / MI MIX 2S / POCOPHONE F1 / REDMI 5 / REDMI 6 / REDMI 6A / REDMI 7 / REDMI GO / REDMI NOTE 5 / REDMI NOTE 5 AL DUAL CAMERA / REDMI NOTE 7 / REDMI S2 / MI 9 LITE / MI A3 / REDMI 8 / REDMI 8A / REDMI NOTE 8 / REDMI NOTE 8 PRO / REDMI NOTE 8T / REDMI NOTE 9 PRO / REDMI NOTE 9S

ZTE
BLADE / BLADE A452 / BLADE Q / BLADE S / BLADE V7 LITE / ERA / FTV / GRAND MEMO V9815 / GRAND X IN / MIMOSA X / N290 / R236 / R237 / R620 / S213 / SKATE / SKATE MESSAGE / STYLE Q / X991