

BIGBEN CONNECTED

Protecteur de câble tortue

Un petit animal tout mignon qui protégera et décorera le connecteur de votre câble.

GENCODE :
3571211422624



REF. :

CBLCUSTOTURTLE



Caractéristiques

Protecteur de câble tortue :

Facile à installer, facile à utiliser

Protège votre câble

Fun et amusant

Il trouvera tout naturellement sa place à la maison ou au bureau

Atout

Facile à utiliser

Design fun

Couleur	Vert
Contenu du pack	1 Protecteur de câble tortue

MOBILES COMPATIBLES

ACER

ALLEGRO / BE TOUCH E210 / CLOUDMOBILE S500 / ICONIA TAB A501 / ICONIA TAB B1-A71 / LIQUID E1 / LIQUID E2 / LIQUID EXPRESS E320 / LIQUID GALLANT E350 / LIQUID GLOW / LIQUID Z110 / LIQUID Z2 / LIQUID Z200 / LIQUID Z3

ALCATEL

1 (5033) / 1S (5024) / 1X (5059) / 1X 2019 (5008) / 3 (5052) / 3C (5026) / 3L (5034) / 3V (5099) / 3X (5058) / 3X 2019 (5048) / 5 (5086) / 5V (5060) / A3 / A3 XL / A5 LED / IDOL 3 (4.7) / IDOL 3 (5.5) / IDOL 4 / ONE TOUCH GOPLAY / ONE TOUCH IDOL / ONE TOUCH IDOL 2S / ONE TOUCH IDOL MINI / ONE TOUCH IDOL S / ONE TOUCH IDOL ULTRA / ONE TOUCH M'POP / ONE TOUCH PIXI 3 4 POUCES / ONE TOUCH POP S3 / ONE TOUCH STAR / ONE TOUCH X POP / OT-203 / OT-506 / OT-506D / OT-655 / OT-838 / OT-995 / OT-997 / PIXI 3 3.5 / PIXI 3 4 / PIXI 3 4.5 / PIXI 4 3G / PIXI 4 5 / POP 2 4.5 / POP 3 5.0 / POP 4 / POP C1 / POP C5 / POP C7 / POP C9 / POP S7 / U5

APPLE

IPAD 10.2 / IPAD 9.7 (2017) / IPAD 9.7 (2018) / IPAD AIR 2 / IPAD MINI 4 / IPAD PRO / IPAD PRO 10.5 / IPAD PRO 11 (2018) / IPAD PRO 12.9 (2018) / IPAD PRO 9.7 / IPHONE 11 / IPHONE 11 PRO / IPHONE 11 PRO MAX / IPHONE 5 / IPHONE 5C / IPHONE 6 / IPHONE 6 PLUS / IPHONE 6S / IPHONE 6S PLUS / IPHONE 7 / IPHONE 7 PLUS / IPHONE 7 PLUS RED / IPHONE 7 RED / IPHONE 8 / IPHONE 8 PLUS / IPHONE SE / IPHONE X / IPHONE XR / IPHONE XS / IPHONE XS MAX

ARCHOS

40 TITANIUM / 45 HELIUM 4G / SAPHIR 50X

ASUS

GOOGLE NEXUS 7 / NEXUS 7 / PADFONE / PADFONE 2 / ZENFONE 2 ZE500 CL / ZENFONE 2 ZE550 ML / ZENFONE 3 MAX ZC520TL / ZENFONE 4 MAX PLUS ZC554KL / ZENFONE 4 MAX ZC520KL / ZENFONE LIVE ZB501KL / ZENFONE MAX PRO M1 ZB601KL

BLACKBERRY

9720 / BOLD 9780 / BOLD 9790 / BOLD TOUCH 9900 / BOLD TOUCH 9930 / CLASSIC / CURVE 9320 / CURVE 9360 / CURVE 9380 / KEY2 / LEAP / PASSPORT / PLAYBOOK / PRIV / Q10 / Q5 / TORCH 9810 / TORCH 9860 / Z10

BOUYGUES TELECOM

BC 211 / BC311 / BS351 / BS401 / BS402 / BS403 / BS451 / BS471 / ULTYM 4 / ULTYM 4 MAXI / ULTYM 5 / ULTYM 5.2

CROSSCALL

ACTION X3 / CORE X3 / SPIDER X1 / TREKKER X3 / TREKKER M 1 / TREKKER X4

DORO

5516 / 6530 / 8020X / 8031 / 8035 / 8040 / 825 / SECURE 580/580 IUP

ECHO

BUZZ / DUNE / FEELING / FUSION / HALO / HORIZON LITE / HORIZON LITE PLUS / HORIZON M / JAVA / LOLLY / LOOK / MOON / NOTE / PUSH / SMART4G / STAR / STELLAR / STELLAR 4G / SURF / VOLT / WIZ

FUJITSU

STYLISTIC S01

GOOGLE

PIXEL 2 / PIXEL 2 XL / PIXEL 3 / PIXEL 3 XL / PIXEL 3a / PIXEL 4 XL

HONOR

HONOR 10 / HONOR 10 LITE / HONOR 20 / HONOR 20 LITE / HONOR 5C / HONOR 5X / HONOR 6 PLUS / HONOR 6A / HONOR 6C / HONOR 6C PRO / HONOR 6X / HONOR 7 / HONOR 7A / HONOR 7C / HONOR 7S / HONOR 7X / HONOR 8 / HONOR 8A / HONOR 8S / HONOR 8X / HONOR 9 / HONOR 9 LITE / HONOR 9X / HONOR PLAY / VIEW 10 / VIEW 20

HP

TOUCHPAD

HTC

10 / DESIRE 10 LIFESTYLE / DESIRE 12 / DESIRE 510 / DESIRE 530 / DESIRE 601 / DESIRE 610 / DESIRE 620 / DESIRE 626 / DESIRE 650 / DESIRE 816 / DESIRE 820 / DESIRE 825 / DESIRE C / DESIRE EYE / DESIRE X / EVO 3D / EXPLORER / FLYER / GOOGLE NEXUS ONE / NEXUS 9 / ONE / ONE A9 / ONE M8 / ONE M9 / ONE MINI / ONE MINI 2 / ONE S / ONE SV / ONE V / ONE X / ONE X PLUS / One X9 / ONE XL / RADAR / RHYME / SENSATION / SENSATION EX / SENSATION XL / TITAN / U11 / WINDOWS PHONE 8S / WINDOWS PHONE 8X

HUAWEI

ASCEND D QUAD / ASCEND D QUAD XL / ASCEND D1 / ASCEND G300 / ASCEND G6 / ASCEND G6 4G / ASCEND G620S / ASCEND G740 / ASCEND G750 / ASCEND MATE 7 / ASCEND P1 / ASCEND P1 S / ASCEND P7 / ASCEND Y330 / ASCEND Y530 / ASCEND Y550 / G330 / G6150 / IDEOS S7 / MATE 10 LITE / MATE 10 PRO / MATE 20 / MATE 20 LITE / MATE 20 PRO / MATE 30 PRO / MATE 8 / MATE 9 / MATE S / MEDIAPAD T1 10 / MEDIAPAD T3 10 / MEDIAPAD T3 8 / NEXUS 6P / NOVA / NOVA 4 / NOVA 5T / P SMART / P SMART 2019 / P SMART Z / P10 / P10 Lite / P10 PLUS / P20 / P20 LITE / P20 LITE 2019 / P20 PRO / P30 / P30 LITE / P30 PRO / P8 / P8 LITE 2016 / P8 LITE 2017 / P9 / P9 LITE / P9 PLUS / U8350 / Y3 / Y5 / Y5 2018 / Y5 2019 / Y5 II / Y6 / Y6 2017 / Y6 2018 / Y6 2019 / Y6 II / Y6 PRO 2017 / Y635 / Y6S (2019) / Y7 2018 / Y7 2019

LENOVO

C2 / K5 / MOTO Z

LG

A170 / A200 / A250 / A290 / BELLO 2 / C360 / COOKIE 3G T320 / COOKIE LITE T300 / F60 / F70 / G FLEX 2 / G PRO 2 / G2 / G3 / G3 S / G4 / G4 STYLUS / G6 / K10 / K11 / K4 / K40 / K40S / K50S / K7 / K8 / K9 (Candy) / L FINO / L65 / L70 / L80 / L90 / LEON 4G LTE / NEXUS 4 E960 / NEXUS 5 / NEXUS X5 / OPTIMUS 3D MAX P720 / OPTIMUS 3D P920 / OPTIMUS 4X HD P880 / OPTIMUS F5 P875 / OPTIMUS F6 D505 / OPTIMUS G / OPTIMUS L3 E400 / OPTIMUS L3 II E430 / OPTIMUS L4 II / OPTIMUS L5 E610 / OPTIMUS L5 II E460 / OPTIMUS L7 II P710 / OPTIMUS L7 P700 / OPTIMUS L9 P760 / OPTIMUS NET / OPTIMUS PAD / OPTIMUS PRO C660 / OPTIMUS SOL E730 / OPTIMUS VU / PRADA PHONE 3.0 / Q STYLUS + / Q6 / Q60 / T315 / T385

LOGICOM

E350 / E400 / E500 / S450 / S504

MICROSOFT

LUMIA 435 / LUMIA 530 / LUMIA 535 / LUMIA 540 / LUMIA 550 / LUMIA 635 / LUMIA 640 / LUMIA 640 XL / LUMIA 650 / LUMIA 830 / LUMIA 950 / SURFACE GO

MOTOROLA

DEFY + / DEFY MINI XT320 / FIRE XT316 / G6 / GLEAM / GLEAM PLUS / MOTO C PLUS / MOTO E 4G / MOTO E2 / MOTO E4 PLUS / MOTO G / MOTO G 2014 / MOTO G 3E GENERATION / MOTO X / MOTO X 2EME GENERATION / MOTO Z2 PLAY / NEXUS 6 / PRO + / RAZR HD XT925 / RAZR I XT890 / RAZR XT910 / WILDER EX130 / XOOM

NOKIA

1 2018 / 2 / 208 / 3 / 3.1 / 301 / 3310 2017 / 5 / 5.1 / 5.1 PLUS / 500 / 6 / 6 2018 / 6.1 / 603 / 7 PLUS / 7.1 / 700 ZETA / 701 / 7230 / 808 PUREVIEW / 9 PUREVIEW / ASHA 200 / ASHA 201 / ASHA 202 / ASHA 203 / ASHA 300 / ASHA 302 / ASHA 303 / ASHA 305 / ASHA 306 / ASHA 308 / ASHA 311 / ASHA 501 / ASHA 503 / C2-02 / C2-03 / C2-05 / C2-06 / C5-05 / C5-06 / E6-00 / LUMIA 1020 / LUMIA 1320 / LUMIA 1520 / LUMIA 510 / LUMIA 520 / LUMIA 532 / LUMIA 610 / LUMIA 620 / LUMIA 625 / LUMIA 630 / LUMIA 710 / LUMIA 720 / LUMIA 730 / LUMIA 735 / LUMIA 800 / LUMIA 820 / LUMIA 900 / LUMIA 920 / LUMIA 925 / LUMIA 930 / N8 / N9 / ORO / X / X2-02 / X2-05 / X7-00 / XL

ONEPLUS

6T / 7 / 7 PRO

OPPO

A3 / A3S / A5 (2020) / A7 / A9 (2020) / AX7 / FIND X / R15 PRO / RENO / RENO 10X ZOOM / RENO 2 / RENO 2F / RENO 2Z / RENO Z / RX17 NEO

ORANGE

DIVE 71 / HI 4G / HOLLYWOOD / NEVA 80 / NEVA JET / NEVA PLAY / NEVA ZEN / NURA / RISE 51 / RISE 52 / RONO / TECNO N9

PANASONIC

ELUGA / ELUGA POWER

SAMSUNG

B2710 / C3520 / C3595 / C3750 / CHAT 222 E2220 / CHAT 335 S3350 / CHAT 350 C3500 / CHAT 357 S3570 / CORBY II S3850 / E1270 / E2350B / GALAXY A10 A105 / GALAXY A20e A202 / GALAXY A3 A300 / GALAXY A3 A310 2016 / GALAXY A3 A320 2017 / GALAXY A40 A405 / GALAXY A5 A500 / GALAXY A5 A510 2016 / GALAXY A5 A520 2017 / GALAXY A50 A505 / GALAXY A51 A515 / GALAXY A6 A600 2018 / GALAXY A6+ A605 2018 / GALAXY A7 A700 / GALAXY A7 A710 2016 / GALAXY A7 A750 2018 / GALAXY A70 A705 / GALAXY A71 A715 / GALAXY A8 A530 2018 / GALAXY A8+ A730 2018 / GALAXY A80 A805 / GALAXY A9 A920 2018 / GALAXY ACE 2 I8160 / GALAXY ACE 3 S7270 / GALAXY ACE 4 4G G357 / GALAXY ACE PLUS S7500 / GALAXY ACE S5830 ZV / GALAXY ALPHA G850 / GALAXY BEAM I8530 / GALAXY CAMERA GC100 / GALAXY CORE 4G G386 / GALAXY CORE I8260 / GALAXY CORE PLUS G3500 / GALAXY CORE PRIME G360 / GALAXY CORE PRIME VE / GALAXY EXPRESS 2 / GALAXY EXPRESS I8730 / GALAXY FAME LITE S6790 / GALAXY FAME S6810 / GALAXY FOLD / GALAXY GRAND 2 G7100 / GALAXY GRAND I9082 / GALAXY GRAND NEO I9060 / GALAXY GRAND PRIME G530 / GALAXY J1 J100 / GALAXY J1 J120 2016 / GALAXY J2 PRO J250 2018 / GALAXY J3 J320 2016 / GALAXY J3 J330 2017 / GALAXY J4 CORE / GALAXY J4+ J415 / GALAXY J5 J500 / GALAXY J5 J510 2016 / GALAXY J5 J530 2017 / GALAXY J6 J600 / GALAXY J6+ J610 / GALAXY J7 J710 2016 / GALAXY J7 J730 2017 / GALAXY K ZOOM C115 / GALAXY M PRO B7800 / GALAXY MEGA 5.8 I9150 / GALAXY MEGA I9200 / GALAXY MINI 2 S6500 / GALAXY NEXUS I9250 / GALAXY NOTE 10 + N975 / GALAXY NOTE 10 N970 / GALAXY NOTE 10.1 2014 P600 / GALAXY NOTE 2 N7100 / GALAXY NOTE 3 LITE N7505 / GALAXY NOTE 3 N9000 / GALAXY NOTE 4 N910 / GALAXY NOTE 8.0 N5100 / GALAXY NOTE EDGE N915 / GALAXY NOTE N7000 / GALAXY NOTE10 LITE / GALAXY NOTE8 N950 / GALAXY NOTE9 N960 / GALAXY POCKET 2 G110 / GALAXY POCKET NEO S5310 / GALAXY POCKET PLUS S5301 / GALAXY POCKET S5300 / GALAXY POP PLUS S5570I / GALAXY PRO B7510 / GALAXY R I9103 / GALAXY S 10 + G975 / GALAXY S 10 5G G977 / GALAXY S 10 e G970 / GALAXY S 10 G973 / GALAXY S 2 I9100 NFC / GALAXY S 2 LTE I9210 / GALAXY S 2 PLUS I9105 / GALAXY S 20 + G985 / GALAXY S 20 G980 / GALAXY S 20 ULTRA G988 / GALAXY S 3 4G I9305 / GALAXY S 3 I9300 / GALAXY S 3 MINI I8190 / GALAXY S 4 ACTIVE I9295 / GALAXY S 4 I9500 / GALAXY S 4 MINI I9190 / GALAXY S 4 ZOOM / GALAXY S 5 MINI G800 / GALAXY S 6 EDGE G925 / GALAXY S 6 EDGE PLUS G928 / GALAXY S 6 G920 / GALAXY S 7 EDGE G935 / GALAXY S 7 G930 / GALAXY S 8 + G955 / GALAXY S 8 G950 / GALAXY S 9 + G965 / GALAXY S 9 G960 / GALAXY S ADVANCE I9070 / GALAXY S PLUS I9001 / GALAXY TAB 10.1 2016 T850 / GALAXY TAB 10.1 P7100 / GALAXY TAB 3 10.1 P5210 / GALAXY TAB 3 7.0 T210 / GALAXY TAB 3 8.0 T310 / GALAXY TAB 3 LITE 7.0 T110 / GALAXY TAB 4 10.1 T530 / GALAXY TAB 4 7.0 T230 / GALAXY TAB A 10.1 (2019) / GALAXY TAB A 10.1 T580 (2016) / GALAXY TAB A 10.5 / GALAXY TAB A 7 T280 (2016) / GALAXY TAB A 9.7 SM-T550 / GALAXY TAB ACTIVE PRO / Galaxy Tab E / GALAXY TAB PRO 10.1 T520 / GALAXY TAB PRO 8.4 T320 / GALAXY TAB S 10.5 T800 / GALAXY TAB S 8.4 T700 / GALAXY TAB S2 8.0 T710 / GALAXY TAB S2 9.7 T810 / GALAXY TAB S3 9.7 T825 / GALAXY TAB S4 10.5 T830 / GALAXY TAB S5E / GALAXY TABPRO S W700 / GALAXY TREND 2 LITE G318 / GALAXY TREND LITE S7390 / GALAXY TREND PLUS S7580 / GALAXY TREND S7560 / GALAXY W I8150 / GALAXY XCOVER 2 S7710 / GALAXY XCOVER 3 G388 / GALAXY XCOVER 4 / GALAXY XCOVER S5690 / GALAXY Y PRO B5510 / GALAXY Y S5360 / GALAXY YOUNG 2 G130 / GALAXY YOUNG S6310 / GOOGLE NEXUS 10 P8110 / NEXUS S I9023 / OMNIA 7 I8700 / OMNIA M S7530 / OMNIA W I8350 / PLAYER CITY S5260 / PLAYER MINI 2 C3310 / REX 70 S3800 / S5610 / STAR 3 S5220 / WAVE 3 S8600 / WAVE 578 S5780 / WAVE M S7250 / WAVE Y S5380

SFR

S BY SFR 101 / S BY SFR 102 / S BY SFR 116 / S BY SFR 118 / S BY SFR 1180 / S BY SFR 124 / S BY SFR 501 / S BY SFR C1 / SFR S BY SFR 117 / STARACTIVE / STARACTIVE 2 / STARADDICT 2 / STARADDICT 2 PLUS / STARADDICT 3 / STARADDICT 4 / STARADDICT 5 / STARADDICT 6 / STARNaute 2 / STARNaute 3 / STARSHINE / STARSHINE 2 / STARSHINE 3 / STARSHINE 4 / STARSHINE 5 / STARTEXT 2 / STARTRAIL 2 / STARTRAIL 3 / STARTRAIL 4 / STARTRAIL 5 / STARTRAIL 6 / STARTRAIL 7 / STARTRAIL 8 / STARTRAIL 9 / STARXTREM / STARXTREM 4 / STARXTREM 6 / STARXTREM II / TEXT EDITION 153

SONY

LIVE WITH WALKMAN / MIX WALKMAN / TABLET S / TXT / TXT PRO / W8 / XPERIA 1 / XPERIA 10 / XPERIA 10 PLUS / XPERIA 5 / XPERIA ACTIVE / XPERIA ARC S / XPERIA C3 / XPERIA C4 / XPERIA C5 ULTRA / XPERIA E / XPERIA E1 / XPERIA E3 / XPERIA E4 / XPERIA E4G / XPERIA E5 / XPERIA GO / XPERIA ION / XPERIA J / XPERIA KYNO V / XPERIA L1 / XPERIA L2 / XPERIA L3 / XPERIA M / XPERIA M2 / XPERIA M4 AQUA / XPERIA M5 / XPERIA MINI / XPERIA MINI PRO / XPERIA MIRO / XPERIA P / XPERIA RAY / XPERIA S / XPERIA SOLA / XPERIA SP / XPERIA T / XPERIA T2 ULTRA / XPERIA T3 / XPERIA TABLET Z / XPERIA TIPO / XPERIA U / XPERIA X / XPERIA X COMPACT / XPERIA XA / XPERIA XA ULTRA / XPERIA XA1 / XPERIA XA1 ULTRA / XPERIA XA2 / XPERIA XA2 PLUS / XPERIA XA2 ULTRA / XPERIA XZ / XPERIA XZ PREMIUM / XPERIA XZ1 / XPERIA XZ1 COMPACT / XPERIA XZ2 / XPERIA XZ2 COMPACT / XPERIA XZ3 / XPERIA Z / XPERIA Z ULTRA / XPERIA Z1 / XPERIA Z1 COMPACT / XPERIA Z2 / XPERIA Z3 / XPERIA Z3 COMPACT / XPERIA Z3+ / XPERIA Z5 / XPERIA Z5 COMPACT / XPERIA Z5 PREMIUM / XPERIA ZL

SOSH

SOSHPHONE MINI

WIKO

BARRY / BIRDY / BLOOM / BLOOM 2 / CINK / CINK FIVE / CINK KING / CINK PEAX / CINK PEAX 2 / CINK PLUS / CINK SLIM / DARKFULL / DARKMOON / DARKKNIGHT / DARKSIDE / DEA / DUELLE / FEVER / FREDDY / GETAWAY / GOA / HARRY / HARRY 2 / HIGHWAY / HIGHWAY PURE 4G / HIGHWAY SIGNS / HIGHWAY STAR 4G / IGGY / JERRY / JERRY 2 / JERRY 3 / JIMMY / KITE / LENNY / LENNY 2 / LENNY 3 / LENNY 4 / LENNY 5 / OZZY / PULP 4G / PULP FAB / RAINBOW / RAINBOW 4G / RAINBOW JAM 3G / RAINBOW LITE 4G / RAINBOW UP 4G / RIDGE 4G / RIDGE FAB 4G / ROBBY / SELFY 4G / SLIDE / SOAP / STAIRWAY / SUBLIM / SUNNY / SUNNY 2 / SUNNY 2 PLUS / SUNNY 3 / SUNSET / SUNSET 2 / TOMMY / TOMMY 2 / TOMMY 2 PLUS / TOMMY 3 / U FEEL / U FEEL LITE / U FEEL PRIME / U PULSE / U PULSE LITE / VENIA / VIEW / VIEW 3 / VIEW 3 LITE / VIEW GO / VIEW LITE / VIEW MAX / VIEW PRIME / VIEW XL / VIEW2 / WAX / WIM / WIM LITE / Y50 / Y60 / Y80

XIAOMI

BLACK SHARK HELO / MI 8 / MI 8 LITE / MI 9 / MI 9 LITE / MI 9 SE / MI 9T / MI 9T PRO / MI A1 / MI A2 / MI A3 / MI MIX 2 / MI MIX 2S / MI MIX 3 / MI NOTE 10 / POCOPHONE F1 / REDMI 5 / REDMI 6 / REDMI 6A / REDMI 7 / REDMI 7A / REDMI 8 / REDMI GO / REDMI NOTE 5 / REDMI NOTE 5 AL DUAL CAMERA / REDMI NOTE 7 / REDMI NOTE 8 / REDMI NOTE 8T / REDMI S2

ZTE

BLADE A452 / BLADE Q / BLADE S / BLADE V7 LITE / ERA / FTV / GRAND MEMO V9815 / GRAND X IN / MIMOSA X / ORBIT / R236 / R237 / R620 / S203 / SKATE / SKATE MESSAGE / STYLE Q / TANIA / X991