



BIGBEN CONNECTED

Kit nettoyage : Spray 300ml, raclettes et lingettes

Kit de nettoyage, un allié indispensable pour l'utilisation de la machine de découpe Rockspace

GENCODE :
3571211425762



REF. :

KITNETTOYAGEBBC

Caractéristiques

Kit nettoyage composé d'un spray 300ml, de raclettes et de lingettes :

Spray de 300ml pour smartphone

Raclette permettant d'éradiquer les bulles lors de la pose de film sur votre smartphone

Lingettes microfibras pour un nettoyage en douceur et efficace

Atout

Pratique

Kit complet

Contenu du pack	1 Spray nettoyant pour smartphone 300ml + 2 raclettes + 2 lingettes microfibre
-----------------	--

MOBILES COMPATIBLES

ALCATEL

1 (5033) / 1S (5024) / 1X (5059) / 1X 2019 (5008) / 3 (5052) / 3C (5026) / 3L (5034) / 3V (5099) / 3X (5058) / 5 (5086) / 5V (5060) / A3 / A3 XL / A5 LED / IDOL 3 (4.7) / IDOL 3 (5.5) / IDOL 4 / ONE TOUCH GOPLAY / ONE TOUCH IDOL / ONE TOUCH IDOL 2S / ONE TOUCH IDOL MINI / ONE TOUCH IDOL S / ONE TOUCH IDOL ULTRA / ONE TOUCH M'POP / ONE TOUCH PIXI 3 4 POUCES / ONE TOUCH POP S3 / ONE TOUCH STAR / ONE TOUCH X POP / OT-112 / OT-113 / OT-203 / OT-213 / OT-305 / OT-306 / OT-355 / OT-361 / OT-505 / OT-506 / OT-506D / OT-655 / OT-803 / OT-808 / OT-838 / OT-890 / OT-990 / OT-995 / OT-996 / OT-997 / PIXI 3 3.5 / PIXI 3 4 / PIXI 3 4.5 / PIXI 4 3G / PIXI 4 5 / POP 2 4.5 / POP 3 5.0 / POP 4 / POP C1 / POP C5 / POP C7 / POP C9 / POP S7 / U5 / 1B 2020 / 1S 2020 / 3L 2020 / 3X 2019 (5048)

APPLE

IPHONE 11 / IPHONE 11 PRO / IPHONE 11 PRO MAX / IPHONE 3G / IPHONE 3GS / IPHONE 4 / IPHONE 4S / IPHONE 5 / IPHONE 5C / IPHONE 5S / IPHONE 6 / IPHONE 6 PLUS / IPHONE 6S / IPHONE 6S PLUS / IPHONE 7 / IPHONE 7 PLUS / IPHONE 7 PLUS RED / IPHONE 7 RED / IPHONE 8 / IPHONE 8 PLUS / IPHONE SE / IPHONE X / IPHONE XR / IPHONE XS / IPHONE XS MAX / IPOD TOUCH / AIRPODS / AIRPODS PRO / IPAD AIR 4 / IPHONE 12 / IPHONE 12 MINI / IPHONE 12 PRO / IPHONE 12 PRO MAX / IPHONE SE (2020)

CROSSCALL

ACTION X3 / CORE X3 / SPIDER X1 / TREKKER X3 / TREKKER M 1 / TREKKER X4 / CORE M4 / CORE T4 / CORE X4

DELL

AERO / MINI 3IX / STREAK / THUNDER / VENUE PRO / XCD28 / XCD35

DORO

5516 / 6050 / 6530 / 7070 / 8020X / 8031 / 8035 / 8040 / 8042 / 825 / HANDLEEASY 328GSM / HANDLEEASY 330GSM / HANDLEPLUS 326 / HANDLEPLUS 334 / LIBERTO 820 MINI / LIBERTO 822 / PHONEEASY 332GSM / PHONEEASY 338GSM / PHONEEASY 341GSM / PHONEEASY 342 / PHONEEASY 345 / PHONEEASY 409GSM / PHONEEASY 410 / PHONEEASY 610 / PHONEEASY 612 / PHONEEASY 615 / SECURE 580/580 IUP / 6040 / 6060 / 7030 / 7080 / 8062 / 8080

ECHO

BUZZ / DUNE / FEELING / FLOW / FUSION / HALO / HORIZON / HORIZON LITE / HORIZON LITE PLUS / HORIZON M / JAVA / LOLLY / LOOK / MOON / NOTE / PUSH / SMART4G / STAR / STELLAR / STELLAR 4G / SURF / VOLT / WIZ

FUJITSU

STYLISTIC S01

GOOGLE

PIXEL 2 / PIXEL 2 XL / PIXEL 3 / PIXEL 3 XL / PIXEL 3a / PIXEL 4 / PIXEL 4 XL / PIXEL 4A / PIXEL 4A 5G / PIXEL 5

HONOR

HONOR 10 / HONOR 10 LITE / HONOR 20 / HONOR 20 LITE / HONOR 5C / HONOR 5X / HONOR 6 PLUS / HONOR 6A / HONOR 6C / HONOR 6C PRO / HONOR 6X / HONOR 7 / HONOR 7A / HONOR 7C / HONOR 7S / HONOR 7X / HONOR 8 / HONOR 8A / HONOR 8S / HONOR 8X / HONOR 9 / HONOR 9 LITE / HONOR PLAY / VIEW 10 / VIEW 20 / 9A / 9X LITE / HONOR 9X

HP

PRE 3 / VEER

HTC

10 / 7 MOZART / 7 PRO / 7 TROPHY / ARIA / CHACHA / DESIRE 10 LIFESTYLE / DESIRE 12 / DESIRE 310 / DESIRE 510 / DESIRE 530 / DESIRE 601 / DESIRE 610 / DESIRE 620 / DESIRE 626 / DESIRE 650 / DESIRE 816 / DESIRE 820 / DESIRE 825 / DESIRE C / DESIRE EYE / DESIRE HD / DESIRE S / DESIRE X / DESIRE Z / EVO 3D / EXPLORER / GOOGLE NEXUS ONE / GRATIA / HD MINI / HD2 / HD7 / INCREDIBLE S / MAGIC / ONE / ONE A9 / ONE M8 / ONE M9 / ONE MINI / ONE MINI 2 / ONE S / ONE SV / ONE V / ONE X / ONE X PLUS / One X9 / ONE XL / RADAR / RHYME / SALSA / SENSATION / SENSATION EX / SENSATION XL / SMART / TITAN / TOUCH HD MINI / TOUCH MAX 4G / TOUCH2 / U PLAY / U11 / WILDFIRE S / WINDOWS PHONE 8S / WINDOWS PHONE 8X

HUAWEI

ASCEND D QUAD / ASCEND D QUAD XL / ASCEND D1 / ASCEND G300 / ASCEND G6 / ASCEND G6 4G / ASCEND G620S / ASCEND G740 / ASCEND G750 / ASCEND MATE 7 / ASCEND P1 / ASCEND P1 S / ASCEND P7 / ASCEND Y330 / ASCEND Y530 / ASCEND Y550 / F616 / G330 / G6150 / IDEOS U8150 / IDEOS U8300 / IDEOS U8500 / IDEOS X5 U8800 / IDEOS X6 U9000 / MATE 10 LITE / MATE 10 PRO / MATE 20 / MATE 20 LITE / MATE 20 PRO / MATE 8 / MATE 9 / MATE S / MEDIAPAD T3 8 / NEXUS 6P / NOVA / NOVA 4 / P SMART / P SMART 2019 / P SMART Z / P10 / P10 Lite / P10 PLUS / P20 / P20 LITE / P20 PRO / P30 / P30 LITE / P30 PRO / P8 / P8 LITE 2016 / P8 LITE 2017 / P9 / P9 LITE / P9 PLUS / U8350 / Y3 / Y5 / Y5 2018 / Y5 2019 / Y5 II / Y6 / Y6 2017 / Y6 2018 / Y6 2019 / Y6 II / Y6 PRO 2017 / Y635 / Y7 2018 / Y7 2019 / MATE 30 PRO / MATE 40 PRO / NOVA 5T / P SMART 2020 / P SMART 2021 / P SMART PRO 2019 / P SMART S / P20 LITE 2019 / P40 / P40 LITE / P40 LITE 5G / P40 LITE 5G / P40 LITE E / P40 PRO / Y5P / Y6P / Y6S (2019)

KAZAM

THUNDER2 5.0 / TROOPER2 5.0

LENOVO

C2 / K5 / MOTO Z

LG

A110 / A120 / A133 / A155 / A170 / A200 / A250 / A290 / A310 / BELLO 2 / C105 / C310 / C320 / C330 / C360 / C710 / COOKIE 3G T320 / COOKIE FRESH GS290 / COOKIE LITE T300 / COOKIE LIVE KM570 / COOKIE PLUS GS500 / COOKIE STYLE T310 / F60 / F70 / FATHOM VS750 / G FLEX / G FLEX 2 / G PRO 2 / G2 / G3 / G3 S / G4 / G4 C / G4 STYLUS / G5 / G6 / GB102 / GB108 / GB110 / GB115 / GB210 / GB230 / GD330 / GM205 / GM310 / GM730 / GS105 / GS200 / GT350 / GT405 / GT540 / GW910 / GX200 / GX300 / GX500 / K10 / K11 / K4 / K40 / K7 / K8 / K9 (Candy) / KP270 / KS365 / KS660 / KT610 / KT770 / KU250 / KU385 / L BELLO / L FINO / L65 / L70 / L80 / L90 / LEON 4G LTE / LOLLIPOP GD580 / MINI GD880 / NEXUS 4 E960 / NEXUS 5 / NEXUS X5 / OPTIMUS 2X P990 / OPTIMUS 3D MAX P720 / OPTIMUS 3D P920 / OPTIMUS 4X HD P880 / OPTIMUS 7 E900 / OPTIMUS BLACK P970 / OPTIMUS CHAT C550 / OPTIMUS CHIC E720 / OPTIMUS F5 P875 / OPTIMUS F6 D505 / OPTIMUS G / OPTIMUS L3 E400 / OPTIMUS L3 II E430 / OPTIMUS L4 II / OPTIMUS L5 E610 / OPTIMUS L5 II E460 / OPTIMUS L7 II P710 / OPTIMUS L7 P700 / OPTIMUS L9 P760 / OPTIMUS ME P350 / OPTIMUS NET / OPTIMUS ONE P500 / OPTIMUS PRO C660 / OPTIMUS SOL E730 / P520 / POPCORN GU280 / PRADA PHONE 3.0 / PURE GD550 / Q STYLUS + / Q6 / Q60 / SWIFT GT540 / T315 / T385 / TOWN C300 / VIEWTY SMILE GT400 / VIEWTY SNAP GM360 / K22 / K40S / K50S / K51S

LOGICOM

E350 / E400 / E500 / S450 / S504

MICROSOFT

LUMIA 435 / LUMIA 530 / LUMIA 535 / LUMIA 540 / LUMIA 550 / LUMIA 635 / LUMIA 640 / LUMIA 640 XL / LUMIA 650 / LUMIA 830 / LUMIA 950 / LUMIA 950 XL

MOTOROLA

A3000 / ATRIX 3G / ATRIX 4G MB860 / BALI / BRAVO MB520 / CHARM / DEFY + / DEFY MINI XT320 / DEXT / DROID PRO XT610 / DROID X / E6 / EM28/EM330 / EM30 / EM35 / ES400 / EX115 / FIRE XT316 / FLIPOUT MB511 / FLIPSIDE MB508 / G6 / GLAM XT800 / GLEAM / GLEAM PLUS / KARMA QA1 / MILESTONE / MILESTONE 2 / MILESTONE XT720 / MOTO C PLUS / MOTO E 4G / MOTO E2 / MOTO E4 PLUS / MOTO G / MOTO G 2014 / MOTO G 3E GENERATION / MOTO X / MOTO X 2EME GENERATION / MOTO Z2 PLAY / NEXUS 6 / PRO / PRO + / Q11 / RAMBLER / RAZR HD XT925 / RAZR I XT890 / RAZR V3 / RAZR V3I / RAZR XT910 / SPICE XT300 / V1100 / VE66 / W160/W156 / W181 / W388 / W396 / WILDER EX130 / WX295 / WX404 / XT3 XT502 / XT5 XT502

NINTENDO

SWITCH

NOKIA

1 2018 / 100 / 101 / 108 / 112 / 113 / 1202 / 2 / 208 / 2220 SLIDE / 2310 / 2680 SLIDE / 2710 NAVIGATOR / 3 / 3.1 / 301 / 3310 2017 / 5 / 5.1 / 5.1 PLUS / 500 / 5235 CWM / 5250 / 6 / 6 2018 / 6.1 / 603 / 6133B / 6267 / 6288 / 6350 / 6650 FOLD / 6700 CLASSIC / 6700 SLIDE / 7 PLUS / 7.1 / 700 ZETA / 701 / 7210 SUPERNOVA / 7230 / 808 PUREVIEW / 9 PUREVIEW / ASHA 200 / ASHA 201 / ASHA 202 / ASHA 203 / ASHA 300 / ASHA 302 / ASHA 303 / ASHA 305 / ASHA 306 / ASHA 308 / ASHA 311 / ASHA 501 / ASHA 503 / BOOKLET / C1-00 / C1-01 / C1-02 / C2-00 / C2-01 / C2-02 / C2-03 / C2-05 / C2-06 / C3 / C3-01 TOUCH AND TYPE / C5 / C5-03 / C5-05 / C5-06 / C6 / C6-01 / C7-00 / E5 / E6-00 / E7 / LUMIA 1020 / LUMIA 1320 / LUMIA 1520 / LUMIA 510 / LUMIA 520 / LUMIA 532 / LUMIA 610 / LUMIA 620 / LUMIA 625 / LUMIA 630 / LUMIA 710 / LUMIA 720 / LUMIA 730 / LUMIA 735 / LUMIA 800 / LUMIA 820 / LUMIA 900 / LUMIA 920 / LUMIA 925 / LUMIA 930 / MURAL 6750 / N1800 / N2730 / N7020 / N71 / N77 / N8 / N800 / N81 8GB / N810 WI-MAX / N9 / ORO / SURGE 6790 / X / X1-00 / X1-01 / X2 / X2-01 / X2-02 / X2-05 / X3-02 TOUCH AND TYPE / X5-01 / X7-00 / XL / 5230 XPRESS MUSIC

ONEPLUS

6T / 7 / 7 PRO

OPPO

A3 / A3S / A7 / AX7 / FIND X / R15 PRO / RENO / RENO 10X ZOOM / RX17 NEO / A12 / A15 / A31 / A5 (2020) / A53S / A72 / A9 (2020) / FIND X2 LITE / FIND X2 NEO / FIND X2 PRO / RENO 2 / RENO 2F / RENO 2Z / RENO 4 / RENO 4 PRO 5G / RENO 4Z 5G / RENO Z

ORANGE

DIVE 71 / HI 4G / HOLLYWOOD / NEVA 80 / NEVA PLAY / NURA / RISE 51 / RISE 52 / RONO / TECNO N9 / NEVA JET / NEVA ZEN

PANASONIC

ELUGA / ELUGA POWER

SAGEM

MY X1-2 / MY X3-2 / MY X5-2 / MY X6-2 / my501Ci / SG343i / SG346i

SAMSUNG

B2100 / B2710 / B7222 / C3200 / C3500 / C3520 / C3530 / C3590 / C3750 / C3750 / CHAT 222 E2220 / CHAT 333 S3350 / CHAT 350 C3500 / CHAT 357 S3570 / CORBY II S3850 / E1050 / E1150 / E1170 / E1190 / E1252 / E1270 / E2100 / E2152 / E2230 / E2330 / E2350B / E2370 / E2530 / GALAXY 550 I5500 / GALAXY 551 I5510 / GALAXY A10 A105 / GALAXY A20e A202 / GALAXY A3 A300 / GALAXY A3 A310 2016 / GALAXY A3 A320 2017 / GALAXY A40 A405 / GALAXY A5 A500 / GALAXY A5 A510 2016 / GALAXY A5 A520 2017 / GALAXY A50 A505 / GALAXY A6 A600 2018 / GALAXY A6+ A605 2018 / GALAXY A7 A700 / GALAXY A7 A710 2016 / GALAXY A7 A750 2018 / GALAXY A70 A705 / GALAXY A8 A530 2018 / GALAXY A8+ A730 2018 / GALAXY A80 A805 / GALAXY A9 A920 2018 / GALAXY ACE 2 I8160 / GALAXY ACE 3 S7270 / GALAXY ACE 4 4G G357 / GALAXY ACE PLUS S7500 / GALAXY ACE S5830 / GALAXY ACE S5830 ZV / GALAXY ALPHA G850 / GALAXY BEAM I8530 / GALAXY CAMERA GC100 / GALAXY CORE 4G G386 / GALAXY CORE I8260 / GALAXY CORE PLUS G3500 / GALAXY CORE PRIME G360 / GALAXY CORE PRIME VE / GALAXY EXPRESS 2 / GALAXY EXPRESS I8730 / GALAXY FAME LITE S6790 / GALAXY FAME S6810 / GALAXY FIT S5670 / GALAXY GIO S5660 / GALAXY GRAND 2 G7100 / GALAXY GRAND I9082 / GALAXY GRAND NEO I9060 / GALAXY GRAND PRIME G530 / GALAXY I7500 / GALAXY J1 J100 / GALAXY J1 J120 2016 / GALAXY J2 PRO J250 2018 / GALAXY J3 J320 2016 / GALAXY J3 J330 2017 / GALAXY J4 CORE / GALAXY J4+ J415 / GALAXY J5 J500 / GALAXY J5 J510 2016 / GALAXY J5 J530 2017 / GALAXY J6 J600 / GALAXY J6+ J610 / GALAXY J7 J710 2016 / GALAXY J7 J730 2017 / GALAXY K ZOOM C115 / GALAXY M PRO B7800 / GALAXY MEGA 5.8 I9150 / GALAXY MEGA I9200 / GALAXY MINI 2 S6500 / GALAXY MINI S5570 / GALAXY NAOS I5801 / GALAXY NEXUS I9250 / GALAXY NOTE 10 + N975 / GALAXY NOTE 10 N970 / GALAXY NOTE 2 N7100 / GALAXY NOTE 3 LITE N7505 / GALAXY NOTE 3 N9000 / GALAXY NOTE 4 N910 / GALAXY NOTE EDGE N915 / GALAXY NOTE N7000 / GALAXY NOTE8 N950 / GALAXY NOTE9 N960 / GALAXY POCKET 2 G110 / GALAXY POCKET NEO S5310 / GALAXY POCKET PLUS S5301 / GALAXY POCKET S5300 / GALAXY POP PLUS S5570i / GALAXY PRO B7510 / GALAXY R I9103 / GALAXY S 10 + G975 / GALAXY S 10 e G970 / GALAXY S 10 G973 / GALAXY S 2 I9100 / GALAXY S 2 I9100 NFC / GALAXY S 2 LTE I9210 / GALAXY S 2 PLUS I9105 / GALAXY S 3 4G I9305 / GALAXY S 3 I9300 / GALAXY S 3 MINI I8190 / GALAXY S 4 ACTIVE I9295 / GALAXY S 4 I9500 / GALAXY S 4 MINI I9190 / GALAXY S 4 ZOOM / GALAXY S 5 G900 / GALAXY S 5 MINI G800 / GALAXY S 6 EDGE G925 / GALAXY S 6 EDGE PLUS G928 / GALAXY S 6 G920 / GALAXY S 7 EDGE G935 / GALAXY S 7 G930 / GALAXY S 8 + G955 / GALAXY S 8 G950 / GALAXY S 9 + G965 / GALAXY S 9 G960 / GALAXY S ADVANCE I9070 / GALAXY S I9000 / GALAXY S PLUS I9001 / GALAXY S SCL I9003 / GALAXY TAB S2 8.0 T710 / GALAXY TEOS I5800 / GALAXY TREND 2 LITE G318 / GALAXY TREND LITE S7390 / GALAXY TREND PLUS S7580 / GALAXY TREND S7560 / GALAXY W I8150 / GALAXY XCOVER 2 S7710 / GALAXY XCOVER 3 G388 / GALAXY XCOVER 4 / GALAXY XCOVER S5690 / GALAXY Y PRO B5510 / GALAXY Y S5360 / GALAXY YOUNG 2 G130 / GALAXY YOUNG S6310 / GIORGIO ARMANI B7620 / GRAVITY 2 T469 / GRAVITY 3 T479 / GRAVITY T T669 / M2520 / MISS PLAYER S7070 / N130 / N310 / NC10 / NEXUS S I9023 / OMNIA 7 I8700 / OMNIA M S7530 / OMNIA PRO 4 B7350 / OMNIA PRO 5 B6520 / OMNIA W I8350 / PLAYER ADDICT I900 / PLAYER CITY S5260 / PLAYER F490 / PLAYER FIVE S5560 / PLAYER HD I8910 / PLAYER LIGHT C3510 / PLAYER MINI 2 C3310 / PLAYER MINI C3300 / PLAYER ONE S5230 / PLAYER STAR 2 S5620 / PLAYER STAR S5600 / PLAYER STYLE F480 / PLAYER ULTRA S8300 / REX 70 S3800 / S5610 / S7200 / SGH-C300 / SGH-D500 / SGH-D520 / SGH-E250 / SGH-E900 / SGH-S400i / SGH-S401i / SGH-S500i / SGH-S501i / SGH-Z650i / SHARK S5350 / SMILEY T359 / STAR 3 S5220 / WAVE 3 S8600 / WAVE 533 S5330 / WAVE 575 S5750 / WAVE 578 S5780 / WAVE 723 S7230 / WAVE II S8530 / WAVE M S7250 / WAVE ONE S5250 / WAVE S8500 / WAVE Y S5380 / GALAXY A12 A125 / GALAXY A21S A217 / GALAXY A31 A315 / GALAXY A32 / GALAXY A32 5G / GALAXY A41 A415 / GALAXY A42 5G / GALAXY A51 5G A516 / GALAXY A51 A515 / GALAXY A71 A715 / GALAXY FOLD / GALAXY NOTE 20 5G / GALAXY NOTE 20 ULTRA / GALAXY NOTE10 LITE / GALAXY S 10 5G G977 / GALAXY S 20 + G985 / GALAXY S 20 FE G780 / GALAXY S 20 G980 / GALAXY S 20 ULTRA G988 / GALAXY S 21 / GALAXY S 21 + / GALAXY S 21 ULTRA / GALAXY XCOVER PRO / GALAXY Z FLIP / GALAXY Z FOLD 2 5G

SFR

S BY SFR 101 / S BY SFR 102 / S BY SFR 116 / S BY SFR 118 / S BY SFR 1180 / S BY SFR 124 / S BY SFR 501 / S BY SFR C1 / SFR 115 / SFR 151 / SFR 242 / SFR 251 / X990 / SFR 261 / SFR S BY SFR 117 / SFR S BY SFR 123 / STARACTIVE / STARACTIVE 2 / STARADDICT / STARADDICT 2 / STARADDICT 2 PLUS / STARADDICT 3 / STARADDICT 4 / STARADDICT 5 / STARADDICT 6 / STARNAUTE / STARNAUTE 2 / STARNAUTE 3 / STARSHINE / STARSHINE 2 / STARSHINE 3 / STARSHINE 4 / STARSHINE 5 / STARTEXT / STARTEXT 2 / STARTRAIL / STARTRAIL 2 / STARTRAIL 3 / STARTRAIL 4 / STARTRAIL 5 / STARTRAIL 6 / STARTRAIL 6 PLUS / STARTRAIL 7 / STARTRAIL 8 / STARTRAIL 9 / STARXTREM / STARXTREM 4 / STARXTREM 5 / STARXTREM 6 / STARXTREM II / TEXT EDITION 153 / WINDOWS PHONE INTERNET 7

SONY

ASPEN / CEDAR / ELM / HAZEL / JALOU / K750 / K770 / K800 / LIVE WITH WALKMAN / MIX WALKMAN / NAITE / S500 / SPIRO / TXT / TXT PRO / VIVAZ PRO / VIVAZ U5 / W8 / W810 / XPERIA 1 / XPERIA 10 / XPERIA 10 PLUS / XPERIA ACTIVE / XPERIA ARC / XPERIA ARC S / XPERIA C3 / XPERIA C4 / XPERIA C5 ULTRA / XPERIA E / XPERIA E1 / XPERIA E3 / XPERIA E4 / XPERIA E4G / XPERIA E5 / XPERIA GO / XPERIA ION / XPERIA J / XPERIA KYNO / XPERIA KYNO V / XPERIA L1 / XPERIA L2 / XPERIA L3 / XPERIA M / XPERIA M2 / XPERIA M4 AQUA / XPERIA M5 / XPERIA MINI / XPERIA MINI PRO / XPERIA MIRO / XPERIA P / XPERIA PLAY / XPERIA PRO / XPERIA PURENESS / XPERIA RAY / XPERIA S / XPERIA SOLA / XPERIA SP / XPERIA T / XPERIA T2 ULTRA / XPERIA T3 / XPERIA TIPO / XPERIA U / XPERIA X / XPERIA X COMPACT / XPERIA X1 / XPERIA X10 / XPERIA X10 MINI / XPERIA X10 MINI PRO / XPERIA X8 / XPERIA XA / XPERIA XA ULTRA / XPERIA XA1 / XPERIA XA1 ULTRA / XPERIA XA2 / XPERIA XA2 PLUS / XPERIA XA2 ULTRA / XPERIA XZ / XPERIA XZ PREMIUM / XPERIA XZ1 / XPERIA XZ1 COMPACT / XPERIA XZ2 / XPERIA XZ2 COMPACT / XPERIA XZ3 / XPERIA Z / XPERIA Z ULTRA / XPERIA Z1 / XPERIA Z1 COMPACT / XPERIA Z2 / XPERIA Z3 / XPERIA Z3 COMPACT / XPERIA Z3+ / XPERIA Z5 / XPERIA Z5 COMPACT / XPERIA Z5 PREMIUM / XPERIA ZL / YARI / YENDO W150 / Z610 / ZYLO / LG K51S / XPERIA 10 II / XPERIA 5 / XPERIA 5 II

SOSH

LE MOBILE SOSH / SOSHPHONE MINI

VIVO

X 51 / Y11s / Y20 / Y20s / Y70

WIKO

BARRY / BIRDY / BLOOM / BLOOM 2 / CINK / CINK FIVE / CINK KING / CINK PEAX / CINK PEAX 2 / CINK PLUS / CINK SLIM / DARKFULL / DARKMOON / DARKKNIGHT / DARKSIDE / DEA / DUELLE / FEVER / FREDDY / GETAWAY / GOA / HARRY / HARRY 2 / HIGHWAY / HIGHWAY PURE 4G / HIGHWAY SIGNS / HIGHWAY STAR 4G / IGGY / JERRY / JERRY 2 / JERRY 3 / JIMMY / KITE / LENNY / LENNY 2 / LENNY 3 / LENNY 4 / LENNY 5 / OZZY / PULP 4G / PULP FAB / RAINBOW / RAINBOW 4G / RAINBOW JAM 3G / RAINBOW JAM 4G / RAINBOW LITE 4G / RAINBOW UP 4G / RIDGE 4G / RIDGE FAB 4G / ROBBY / SELFY 4G / SLIDE / SOAP / STAIRWAY / SUBLIM / SUNNY / SUNNY 2 / SUNNY 2 PLUS / SUNNY 3 / SUNSET / SUNSET 2 / TOMMY / TOMMY 2 / TOMMY 2 PLUS / TOMMY 3 / U FEEL / U FEEL LITE / U FEEL PRIME / U PULSE / U PULSE LITE / VENIA / VIEW / VIEW 3 / VIEW 3 LITE / VIEW GO / VIEW LITE / VIEW MAX / VIEW PRIME / VIEW XL / VIEW2 / WAX / WIM / WIM LITE / Y50 / Y60 / Y80 / VIEW 4 / VIEW 4 LITE / VIEW 5 / Y61 / Y81

XIAOMI

BLACK SHARK HELO / MI 8 / MI 8 LITE / MI 9 / MI 9 SE / MI A1 / MI A2 / MI A3 / MI MIX 2 / MI MIX 2S / MI MIX 3 / POCOPHONE F1 / REDMI 5 / REDMI 6 / REDMI 6A / REDMI 7 / REDMI GO / REDMI NOTE 5 / REDMI NOTE 5 AL DUAL CAMERA / REDMI NOTE 7 / REDMI S2 / MI 10 5G / MI 10 LITE 5G / MI 10 PRO 5G / MI 10T 5G / MI 10T LITE 5G / MI 10T PRO 5G / MI 9 LITE / MI 9T / MI 9T PRO / MI NOTE 10 / MI NOTE 10 PRO / REDMI 7A / REDMI 8 / REDMI 8A / REDMI 9 / REDMI 9A / REDMI 9C / REDMI NOTE 8 / REDMI NOTE 8 PRO / REDMI NOTE 8T / REDMI NOTE 9 / REDMI NOTE 9 / REDMI NOTE 9 PRO / REDMI NOTE 9S

ZTE

BLADE / BLADE A452 / BLADE Q / BLADE S / BLADE V7 LITE / ERA / FTV / GRAND MEMO V9815 / GRAND X IN / MIMOSA X / N290 / ORBIT / R236 / R237 / R620 / S202 / S203 / S213 / SKATE / SKATE MESSAGE / STYLE Q / TANIA / X991