



SAMSUNG

GALAXY TAB ACTIVE2

Descriptif produit

Ref : GALAXY TAB ACTIVE2

Dimensions	127.6 x 214.7 x 9.9 mm
Ecran	8 pouces
Processeur	Octo-Core 1.6GHz
Disque dur	16 GB
Système d'exploitation	Android
Versión du système d'exploitation	Android 7.1
Poids net	419 g
Réseau	4G
Affichage	1280 x 800 16M
Versión Bluetooth	Bluetooth v4.2
Autres ports	Fast charging 15W
Appareil photo	oui
MP3	oui

ACCESSOIRES COMPATIBLES ORIGINE

AUDIO

Câbles audio

GP-TGU023AEAWW / MU7E2ZM-A

Ecouteurs filaires

EO-IA500BB / EO-IC100BB / EO-IC100BW / EO-IC500BB / EO-IG950BB / EOHS1303P / HW55030088 /

Ecouteurs sans fil

SM-R177NLV / SM-R180NZK / SM-R180NZW / SM-R400NZA / SM-R400NZW / SM-R510NLV / SM-R510NZA / SM-R510NZW /

Récepteurs audio

AFD-1200.AEUABK /

Batteries de secours

CROSSXPOWERV3 / EB-P3400XU / EB-P3400YU / EB-P4520X / EB-U2510X / EB-U3300XJ /

Câbles de charge
CROSSCBLPLATUSBC / EP-DA705BB / EP-DA705BW / EP-DG930IB / EP-DG930MB / EP-DX310JB / EP-DX310JW / EP-DX510JB / EP-DX510JW / MLL82ZM-A / MMA03ZM-A / MX0K2ZM-A / PUROCBUSBAUSBC1MW /
Chargeurs secteur
EP-T1510NB / EP-T1510NW / EP-T2510NB / EP-T2510NW / EP-T6530NB / EP-TA220NB / EP-TA800NW / GGLCSUSBC30W / GGLGA05732 / MHJE3ZM-A /
Kit Charge maison
2CHW02452315 / CSUSBC18W / EP-L4020NB / EP-T1510XB / EP-T1510XW / EP-T2510XB / EP-T2510XW / EP-T4510XB / EP-T4511XB / EP-TA800XB / EP-TA800XW / GGLCSUSBC30W1M / HW02452312 / HW55030349 / MICS65WGANEUCBLCCW /
Câbles HDMI
MUF82ZM-A
Bracelets et montres
SM-R890NZK / SM-R900NZA / SM-R910NZA
Trackers
EI-T5300BA / EI-T5600BB / EI-T5600BW / EI-T5600KW /
Protège-écrans en verre trempé
EP-T5020XBEGEU
Cartes mémoire micro SD
MB-MC128SA/EU / MB-MC64DA/EU / MB-MC64SA/EU / MB-MD32DA/EU / MB-MG16DA/EU / MB-MG32DA/EU / MB-MG32EA/EU / MB-MG64E/EU / MB-MG64EA/EU / SMMICROSDPRO32 / SMMICSDEVO128GB

ACCESSOIRES COMPATIBLES ADAPTABLES

Casques PC
PS4COMMUNICATOR /
AUDIO
Adaptateurs Audio
ADAPTMICTOC
Casques sans fil
CASB16N /
Câbles audio
ADACTOCC60WB / ADACTOJACKC60WB / ADAJACKMFIW / ADAPTJACK1USBCW / ADAPTUSBC1A / BTADAPT / CBLAUDIOJACKC90CMB / CBLAUDIOJACKMFI90CMW / JACKJACK35B /
Ecouteurs filaires
KPADAPTBB / KPBOUTONUSBCB / KPBOUTONUSBCRB / KPBOUTONUSBCRW / KPINTRAUSBCB / KPINTRAUSBCRB / KPINTRAUSBCW /
Ecouteurs sans fil
ACTIVBUDS6HW / FPYTWSBOUTON / FPYTWSINTRAANCRW /
Ecouteurs True Wireless
COLORBUDSLB / COLORBUDSLP / COLORBUDSLV / COLORBUDSW
Enceintes sans fil
BFDHANDYFOLLOW / BT10RUBIKS / BT14BL / BT14R / BT14RS / BT15SMILEYLOL / BT15SMILEYLOVE / BT15SMILEYWINK / BTLSCACTUS / BTLSDINO / BTLSDUCK / BTLSDUDE / BTLSDWARF / BTLSSHEART / BTLSRABBIT / BTLSSROCKET / BTLSSKULL / BTLSTURTLE / BTLSUNICORNXL / BTSUNICORNBBC / CBLROCKL / CBLROCKM / CBLROCKS /
Récepteurs audio
MUSICBTRECEIVER
Batteries de secours
MS10WPB5000MAHB / MS10WPB5000MAHLB / MS10WPB5000MAHLP / MS10WPB5000MAHLV / PBPOLY10000CMICS / SWITCHPOWER8000 /
Câbles de charge
CABACPASTEQ / CABCC1M2W / CABCC2MB / CABCC2MW / CABTISCC2M3AP / CABTISUSBC2M3AB / CABTISUSBC2M3ABN / CABTISUSBC2M3AP / CABTISUSBC2M3ARB / CBL2EN1ACMICB / CBL3EN1AMFICMICB / CBLAC1M2RB / CBLAC1M2RW / CBLAC2MRB / CBLAC2MRW / CBLAC50CMRB / CBLCC1M2RB / CBLCC1M2RW / CBLCC2M5ARW / CBLCC2MB / CBLCC2MRB / CBLCC2MRW / CBLCC2MW / CBLCC50CMRB /
Chargeurs secteur
BASECS25WCPDB / BASECS2USBACPDB / BASECS30WCPDW / BASECS45WCPDB / BASECS5.4A4USBAW / BASECS65WCPDW / CHARGMULTIUSB4A2C / CS20WCPDRW / CS20WCPDRWWR / CS20WCPDRWYYV / CS25WCPDRB / CS25WCPDRW / CS25WCPDRWWR / CS30WCPDRW / CS32WACPDRW / CS40WACPDRB / CS45WCPDRB / CS65WCGANRW / WCS20WCPDWWR / WOWCS20WCPDW
Chargeurs voiture
CAC25WCPDRB / CAC2USBACFMB / CAC32WACPDRB / WOWCAC20WCPDB
Kit Charge maison
CAC25WCPDCBLCCRB / CAC2USBACW / CACCBLAC3AB / CACCBLCC18WPDB / CACCBLMFIC20WPDB / CS20WCPDCBLMFICRW / CS30WCPDCBLMFICRW / CS3AACBLACRW / CS65WCGANCBLCCRW / CSCBLCC25WPDB / CSCBLCC25WPDRB / EP-LN920CB / WOWCS24ACBLACW /
Kit Charge voiture
CAC30WCPDCBLMFICRW / PACKIPSE22

Barres de son

MULTISOUNDBAR /

Photos et vidéos

SELFESTICKBTB / SELFESTICKTRIB

Protège-écrans

LIQUIDSCREENPROT